



**NLS-HR11**

**Hand-held Barcode Scanner**

**User Guide**

## **Disclaimer**

© 2016 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Fujian Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Fujian Newland Auto-ID Tech. Co., Ltd.

3F, Building A, No.1, Ruijiang West Rd., Mawei, Fuzhou, Fujian, China 350015

<http://www.nlscan.com>

## Revision History

Version	Description	Date
V1.0.0	Initial release.	March 22, 2016
V1.0.1	1. Added the <b>Video Reverse</b> feature in Chapter 5. 2. Added the “Hands-free Scanning” section in Chapter 2.	December 9, 2016

# Table of Contents

<b>Revision History .....</b>	<b>- 3 -</b>
<b>Preface.....</b>	<b>1</b>
Introduction.....	1
Chapter Description .....	1
<b>Chapter 1 Getting Started.....</b>	<b>2</b>
Introduction.....	2
Unpacking .....	2
HR11 Scanner .....	3
Data Port .....	4
Connecting the Scanner to a Host.....	5
Using USB Cable .....	6
Using RS-232 Cable .....	6
Using PS/2 Cable.....	7
Removing Communication Cable .....	7
Power On, Sleep, Power Off, Reboot.....	8
Maintenance.....	8
Dimensions (unit: mm) .....	9
Left View .....	9
Front View .....	9
Top View.....	9
Scanning Instructions.....	10
<b>Chapter 2 System Settings.....</b>	<b>12</b>
Introduction.....	12
Barcode Programming .....	12
Command Programming.....	12
Read Register .....	13
Write Register .....	16
Enable/Disable EEPROM Write.....	19
Write EEPROM .....	21
Read EEPROM.....	24
Registers.....	27

Enable/Disable Barcode Programming.....	44
Programming Barcode Data .....	44
Factory Defaults .....	45
Scan Mode .....	46
Manual Mode .....	46
Continuous Mode.....	47
Sense Mode.....	50
Command Trigger Mode .....	54
Hands-free Scanning .....	55
Security Level.....	56
Good Read Beep .....	57
Good Read Beep Frequency .....	58
Good Read Beep Duration .....	58
Decode Result Notification.....	59
Other Settings .....	60
Silent Mode .....	60
Illumination.....	60
<b>Chapter 3 Communication Settings .....</b>	<b>61</b>
Introduction.....	61
RS-232 Interface .....	61
Baud Rate .....	62
Parity Check.....	63
Stop Bit.....	63
Data Bit .....	64
USB Interface .....	66
USB HID-KBW .....	66
Standard Keyboard.....	67
Emulate ALT+Keypad.....	67
Function Key Mapping.....	68
ASCII Function Key Mapping Table.....	69
USB Country Keyboard Types .....	70
Inter-Keystroke Delay .....	73
Convert Case.....	74
Emulate Numeric Keypad.....	75

USB COM Port Emulation .....	76
USB DataPipe .....	77
HID-POS .....	78
Access the Scanner with Your Program .....	79
Acquire Scanned Data .....	79
VID/PID .....	79
PS/2 Interface .....	80
<b>Chapter 4 Prefix &amp; Suffix .....</b>	<b>81</b>
Introduction .....	81
Prefix Sequence .....	81
Custom Prefix .....	82
Enable/Disable Custom Prefix .....	82
Set Custom Prefix .....	82
AIM ID Prefix .....	83
CODE ID Prefix .....	84
Restore All Default Code IDs .....	84
Set Code ID .....	84
Custom Suffix .....	88
Enable/Disable Custom Suffix .....	88
Set Custom Suffix .....	89
Terminating Character Suffix .....	90
Enable/Disable Terminating Character Suffix .....	90
Set Terminating Character Suffix .....	91
<b>Chapter 5 Symbologies .....</b>	<b>92</b>
Introduction .....	92
Global Settings .....	92
Enable/Disable All Symbologies .....	92
Video Reverse .....	92
Code 128 .....	93
Restore Factory Defaults .....	93
Enable/Disable Code 128 .....	93
Set Length Range for Code 128 .....	94
UCC/EAN-128 .....	95
Restore Factory Defaults .....	95

Enable/Disable UCC/EAN-128 .....	95
Set Length Range for UCC/EAN-128.....	96
AIM 128 .....	97
Restore Factory Defaults.....	97
Enable/Disable AIM 128 .....	97
Set Length Range for AIM 128 .....	98
EAN-8 .....	99
Restore Factory Defaults .....	99
Enable/Disable EAN-8 .....	99
Transmit Check Digit.....	99
Add-On Code .....	100
Add-On Code Required .....	101
EAN-8 Extension.....	101
EAN-13.....	102
Restore Factory Defaults .....	102
Enable/Disable EAN-13 .....	102
Transmit Check Digit.....	102
Add-On Code .....	103
Add-On Code Required .....	104
ISSN .....	105
Restore Factory Defaults .....	105
Enable/Disable ISSN .....	105
ISBN .....	106
Restore Factory Defaults .....	106
Enable/Disable ISBN .....	106
Set ISBN Format.....	107
UPC-E .....	108
Restore Factory Defaults .....	108
Enable/Disable UPC-E .....	108
Transmit Check Digit.....	108
Add-On Code .....	109
Add-On Code Required .....	110
Transmit System Character .....	110
UPC-E Extension.....	111
UPC-A .....	112

Restore Factory Defaults .....	112
Enable/Disable UPC-A .....	112
Transmit Check Digit.....	113
Transmit Preamble Character.....	113
Add-On Code .....	114
Add-On Code Required .....	115
Interleaved 2 of 5 .....	116
Restore Factory Defaults .....	116
Enable/Disable Interleaved 2 of 5.....	116
Check Digit Verification.....	117
Set Length Range for Interleaved 2 of 5 .....	118
ITF-6 .....	119
Restore Factory Defaults .....	119
Enable/Disable ITF-6 .....	119
ITF-14.....	120
Restore Factory Defaults .....	120
Enable/Disable ITF-14 .....	120
Deutsche 14 .....	121
Restore Factory Defaults .....	121
Enable/Disable Deutsche 14 .....	121
Deutsche 12 .....	122
Restore Factory Defaults .....	122
Enable/Disable Deutsche 12 .....	122
Matrix 2 of 5 (European Matrix 2 of 5).....	123
Restore Factory Defaults .....	123
Enable/Disable Matrix 2 of 5.....	123
Check Digit Verification.....	124
Set Length Range for Matrix 2 of 5.....	125
Industrial 25.....	126
Restore Factory Defaults .....	126
Enable/Disable Industrial 25.....	126
Check Digit Verification.....	127
Set Length Range for Industrial 25.....	128
Standard 25.....	129
Restore Factory Defaults .....	129

Enable/Disable Standard 25 .....	129
Check Digit Verification.....	130
Set Length Range for Standard 25.....	131
Code 39.....	132
Restore Factory Defaults .....	132
Enable/Disable Code 39 .....	132
Check Digit Verification.....	133
Transmit Start/Stop Characters .....	134
Enable/Disable Code 39 Full ASCII.....	134
Set Length Range for Code 39.....	135
Codabar.....	136
Restore Factory Defaults .....	136
Enable/Disable Codabar.....	136
Check Digit Verification.....	137
Start/Stop Characters .....	138
Set Length Range for Codabar.....	139
Code 93.....	140
Restore Factory Defaults .....	140
Enable/Disable Code 93 .....	140
Check Digit Verification.....	141
Set Length Range for Code 93.....	142
Code 11 .....	143
Restore Factory Defaults .....	143
Enable/Disable Code 11 .....	143
Check Digit Verification.....	144
Set Length Range for Code 11 .....	145
Plessey.....	146
Restore Factory Defaults .....	146
Enable/Disable Plessey .....	146
Check Digit Verification.....	147
Set Length Range for Plessey.....	148
MSI-Plessey .....	149
Restore Factory Defaults .....	149
Enable/Disable MSI-Plessey .....	149
Check Digit Verification.....	150

Set Length Range for MSI-Plessey .....	151
RSS-14.....	152
Restore Factory Defaults .....	152
Enable/Disable RSS-14 .....	152
Transmit Application Identifier “01” .....	152
RSS-Limited .....	153
Restore Factory Defaults .....	153
Enable/Disable RSS-Limited .....	153
Transmit Application Identifier “01” .....	153
RSS-Expand .....	154
Restore Factory Defaults .....	154
Enable/Disable RSS-Expand.....	154
<b>Appendix .....</b>	<b>155</b>
Factory Defaults Table .....	155
AIM ID Table.....	162
Code ID Table.....	164
ASCII Table .....	165
Digit Barcodes.....	169
Save/Cancel Barcodes .....	172
F1~F12 .....	173

# Preface

## Introduction

This manual provides detailed instructions for setting up and using the NLS-HR11 hand-held barcode scanner (hereinafter referred to as “**HR11 scanner**” or “**the scanner**”).

## Chapter Description

- ✧ *Chapter 1, Getting Started* : This chapter gives a general description of HR11 scanner.
- ✧ *Chapter 2, System Settings* : This chapter introduces two methods to configure the HR11 scanner: barcode programming and command programming.
- ✧ *Chapter 3, Communication Settings* : This chapter describes how to configure RS-232 and USB parameters.
- ✧ *Chapter 4, Prefix & Suffix* : This chapter describes how to use prefix and suffix to customize scanned data.
- ✧ *Chapter 5, Symbologies* : This chapter lists all compatible symbologies and describes how to configure the relevant parameters.
- ✧ *Appendix* : This chapter offers factory defaults table and a bunch of frequently used programming barcodes.

## Chapter 1 Getting Started

### Introduction

HR11 scanner is a 1D barcode scanner with outstanding performance. Based on the **UIMG®** technology independently developed by Newland, HR11 scanner is able to deliver rapid image capture and accurate decoding; it can provide customers with best services. HR11 scanner boasts the ergonomical design that ensures easy and comfortable operation.


An illustrated introduction to the HR11 scanner is included in this chapter. If you have an HR11 device at hand, make good use of it to develop a better understanding of this manual. This chapter is written for normal users, maintenance staff and software developers.

### Unpacking

Open the package and take out HR11 scanner and its accessories. Check to make sure everything on the packing list is present and intact. If any contents are damaged or missing, please keep the original package and contact your dealer immediately for after-sales service.


---

## HR11 Scanner

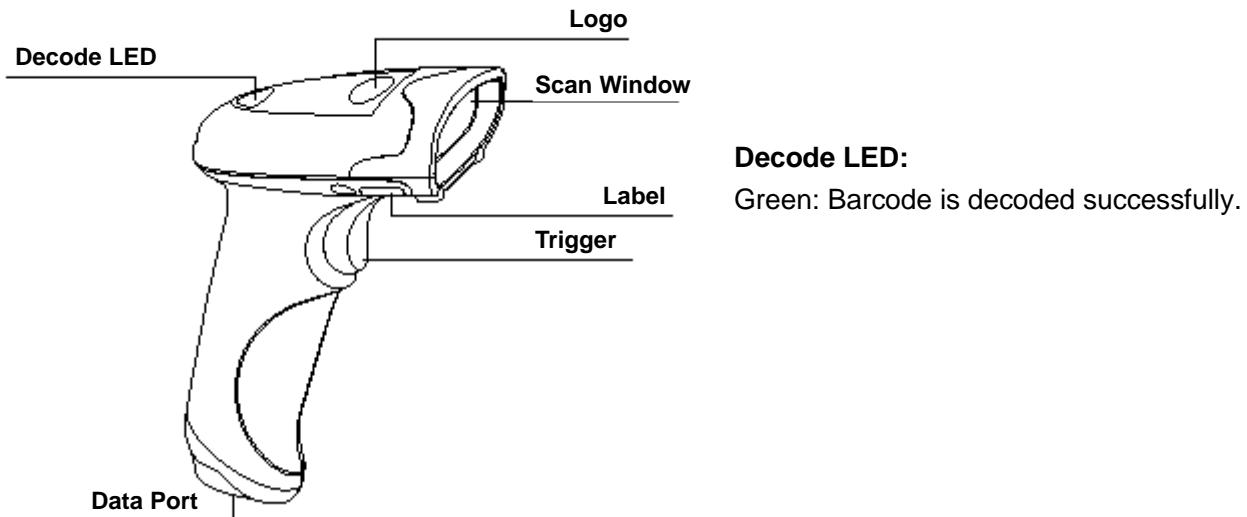

---

## Data Port

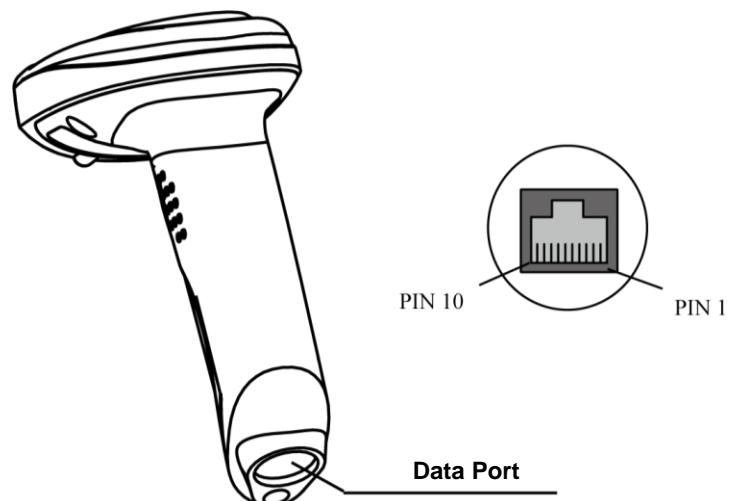


PIN	Signal	Type	Function
1	CLK1	I/O	Keyboard clock signal
2	DATA1	I/O	Keyboard data signal
3	VCC	P	Power+ (DC5V)
4	TXD	O	RS-232 output
5	RXD	I	RS-232 input
6	CLK2	I/O	PC clock signal
7	DATA2	I/O	PC data signal
8	GND	P	Ground
9	D-	I/O	USB signal
10	D+	I/O	

---

## Connecting the Scanner to a Host

The scanner must be connected to a Host in actual application, such as PC, POS or any intelligent terminal with USB or RS-232 port or PS/2 interface, using a communication cable (USB or RS-232 or PS/2 cable).

### USB



USB port on the Host

### RS-232



RS-232 port on the Host

### PS/2




PS/2 port on the Host

**Note:** Please check the port on the host and purchase the cable accordingly.

---


## Using USB Cable

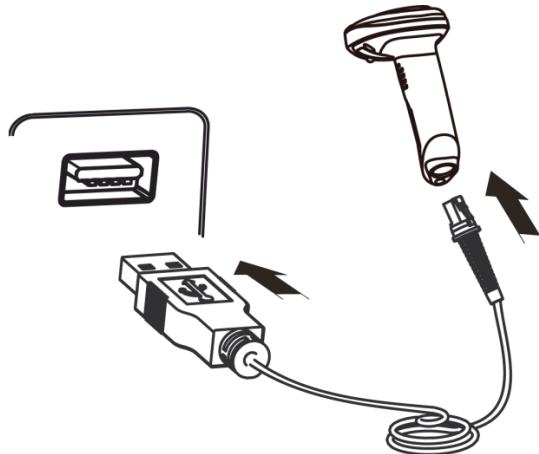

Connect the scanner to a Host through a USB cable with RJ45 and USB connectors:

1. Plug the RJ45 connector into the data port on the scanner.
2. Plug the USB connector into the USB port on the Host.

## Using RS-232 Cable

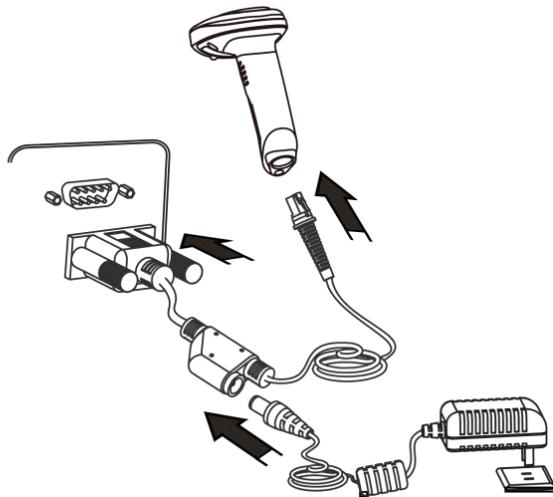


Connect the scanner to a Host through an RS-232 cable with RJ45, RS-232 and power connectors:

1. Plug the RJ45 connector into the data port on the scanner.
  2. Plug the RS-232 connector into the RS-232 port on the Host.
  3. Connect the supplied power adaptor to the power connector of the RS-232 cable.
-

---


## Using PS/2 Cable

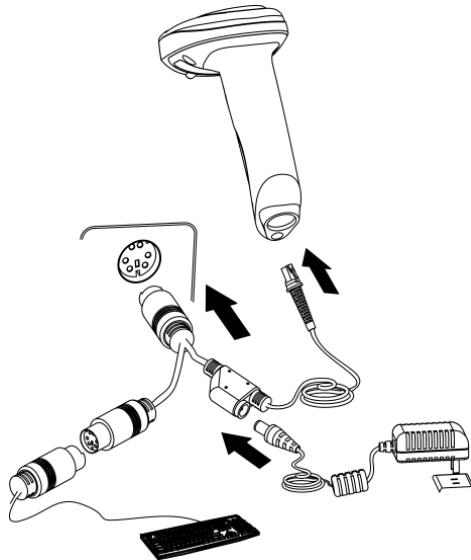

Connect the scanner to a Host through a PS/2 cable with RJ45 and PS/2 connectors and a power jack:

1. Plug the RJ45 connector into the data slot on the scanner.
2. Plug the PS/2 connector into the PS/2 port on the Host.
3. When required, plug the power adapter into the power jack on the PS/2 cable.
4. When required, connect the PS/2 cable to a keyboard via its PS/2 port.

## Removing Communication Cable

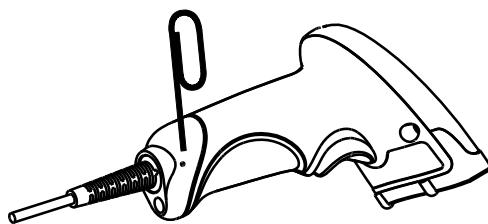

Get an appropriate needle or a straightened paper clip and then follow the steps below:

1. Disconnect the power adaptor from mains if there is one.
2. Insert the needle into the hole.
3. Pull out the cable slowly from the scanner while pressing the needle in.
4. Remove the needle.
5. Disconnect the cable from the Host.

---

## **Power On, Sleep, Power Off, Reboot**

### **Power on the scanner**

Connect the scanner to a Host. Then the scanner will be turned on and automatically enter the sleep mode.

### **Enter the sleep mode**

If no operation is performed on the device for some time, the device will automatically enter the sleep state.

### **Power off the scanner**

Remove the communication cable from the scanner; or remove the communication cable from the Host; or disconnect the power adaptor from mains.

### **Reboot the scanner**

If the scanner stops responding to input or runs abnormally, turn off the scanner and then turn it back on.

## **Maintenance**


- ✧ The scan window should be kept clean.
- ✧ Do not scratch the scan window.
- ✧ Use soft brush to remove the stain from the scan window.
- ✧ Use the soft cloth to clean the window, such as eyeglass cleaning cloth.
- ✧ Do not spray any liquid on the scan window.
- ✧ Do not use any detergent to clean other parts of the device except for water.

**Note: The warranty DOES NOT cover damages caused by inappropriate care and maintenance.**


---

## Dimensions (unit: mm)


### Left View

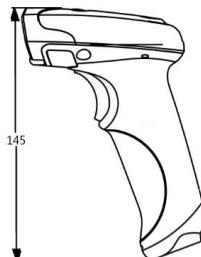

### Front View

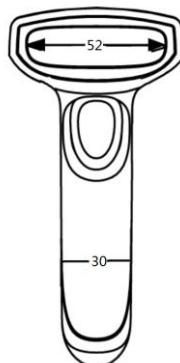

### Top View

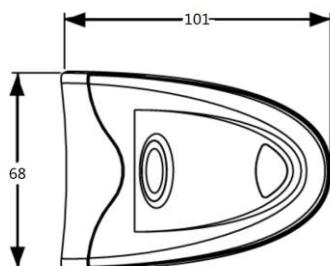


---

## Scanning Instructions

When the scanner is in the Manual scan mode, you can follow the steps below to scan a barcode:

1. Press and hold the Trigger. Then the scanner will project a red aiming beam.
2. Aim the red beam across the center of barcode, as shown below.
3. Release the Trigger when the red beam goes off. If the barcode is decoded successfully, the scanner will emit a good read beep and the decoded data will be sent to the Host.

**Note:** For barcodes of the same batch, the scanner keeps a very high success ratio in certain distance which is regarded as the optimal scanning distance.

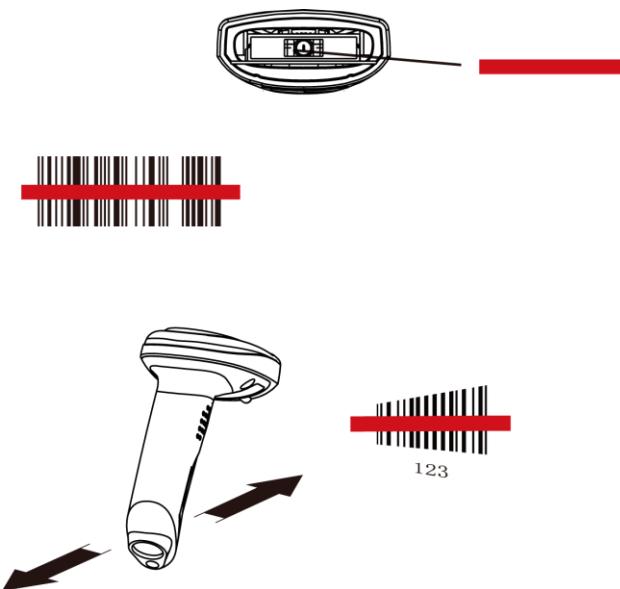


## Scan Angle

The scanner is designed to function within a certain range of scan angles. Any unreasonable deviation may cause decoding failure.

Scan angles of the scanner:

- ✧ Pitch :  $\pm 60^\circ$ ,  $0^\circ$  Roll and  $0^\circ$  Skew
- ✧ Roll :  $\pm 30^\circ$ ,  $0^\circ$  Pitch and  $0^\circ$  Skew
- ✧ Skew:  $\pm 60^\circ$ ,  $0^\circ$  Roll and  $0^\circ$  Pitch

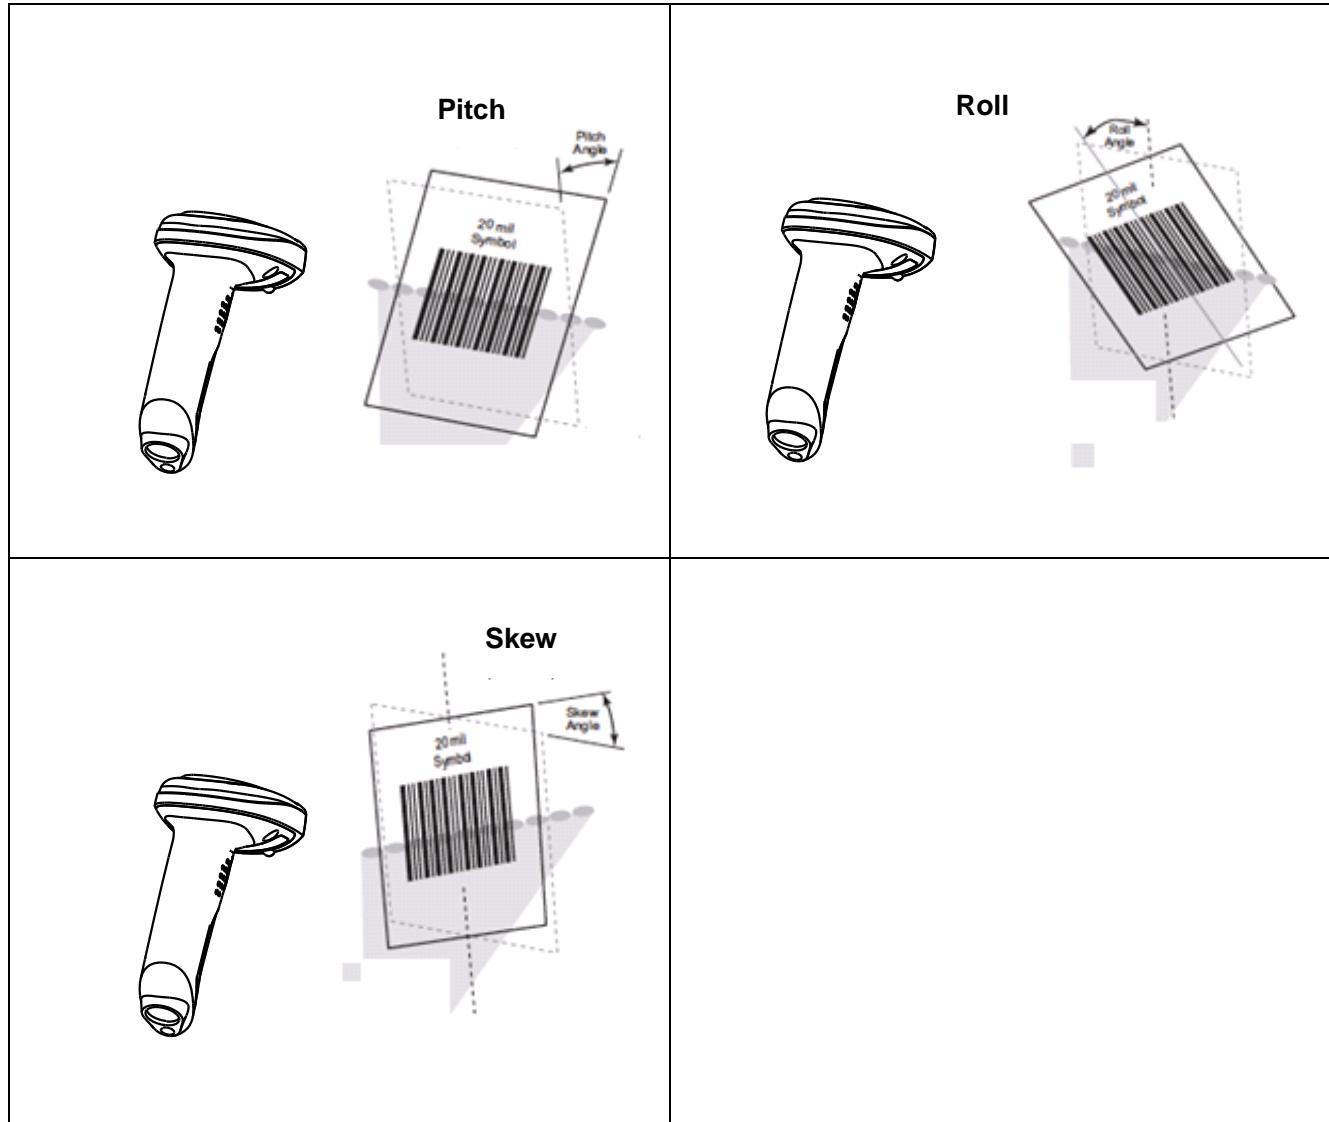



W010F01  
\*\* Enter Setup


## Chapter 2 System Settings

### Introduction

There are two ways to configure the scanner: barcode programming and command programming.

### Barcode Programming

The scanner can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections.

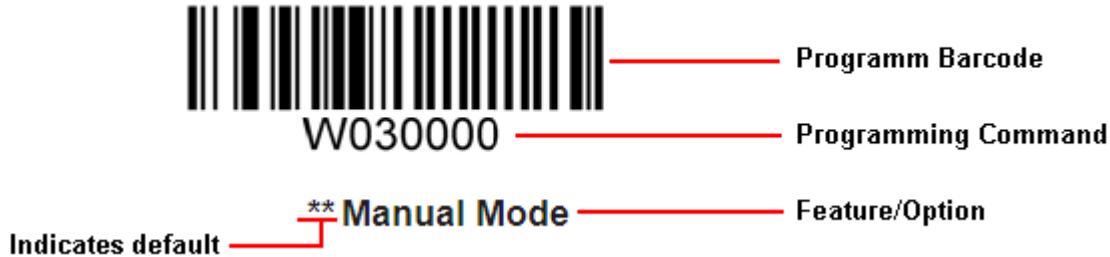

### Command Programming

Besides the barcode programming method, the scanner can also be configured by serial commands sent from the host device. Note that communication parameters on the scanner and the host must match so that two devices can communicate with each other. The default settings of the scanner are 9600bps, no parity check, 8 data bits, 1 stop bit, and no flow control. The scanner uses 8-bit registers.



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

## Read Register

The read register command is used to read the contents of 1 to 256 contiguous registers in the scanner.

**Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}**

Prefix1 : 0x7E 0x00 (2 bytes)

Types : 0x07 (1 byte)

Lens : 0x01 (1 byte).

Address: 0x0000~0xFFFF (2 bytes), starting register address.

Datas : 0x00~0xFF (1 byte), number of registers to be read. When Datas=0x00, 256 contiguous registers are to be read.

FCS : CRC-CCITT checksum (2 bytes)

Computation sequence: Types+ Lens+Address+Datas;  
polynomial:  $X^{16}+X^{12}+X^5+1(0x1021)$ , initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x1000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : Byte count of Datas returned. If Lens=0x00, that means values of 256 contiguous registers are returned.

Datas : 0x00~0xFF, data that are returned.

FCS : CRC-CCITT checksum.

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Example:**

Read the contents (0x35, 0x36, 0x37) of 3 contiguous registers starting from register 0x0005.

- 1) Read operation succeeds:

Command sent: 0x7e 0x00 0x07 0x01 0x00 0x05 **0x03** **0xde** **0xf6**

Message received: 0x02 0x00 0x00 0x03 **0x35** **0x36** **0x37** 0x2a 0xba

- 2) Incorrect FCS:

Command sent: 0x7e 0x00 0x07 0x01 0x00 0x05 **0x03** **0x33** **0x34**

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01

- 3) Invalid command:

Command sent: 0x7e 0x00 0x07 0x01 0x00 0x05 **0x03** **0x33**

Message received: 0x02 0x00 0x03 0x01 0x00 0x6A 0x61



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

## Write Register

The write register command is used to write contiguous registers (1 to 256 registers) in the scanner.

**Syntax:** {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00 (2 bytes)

Types : 0x08 (1 byte)

Lens : 0x00~0xFF (1 byte), byte count, i.e. number of registers written. When Lens=0x00, 256 contiguous registers are to be written.

Address : 0x0000~0xFFFF (2 bytes), starting register address.

Datas : 0x00~0xFF (1~256 bytes), data to be written into the register(s)

FCS : CRC-CCITT checksum (2 bytes).

Computation sequence: Types+ Lens+Address+Datas;  
polynomial:  $X^{16}+X^{12}+X^5+1$  (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

**Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}**

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : 0x33 0x31 (CRC-CCITT checksum)

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Example:**

Write 0x31, 0x32, 0x33, 0x34 into 4 contiguous registers starting from register 0x000a.

1) Write operation succeeds:

Command sent: 0x7e 0x00 0x08 0x04 0x00 0x26 0x31 0x32 0x33 0x34 0xcd 0xa4

Message received: 0x02 0x00 0x00 0x01 0x00 0x33 0x31

2) Incorrect FCS:

Command sent: 0x7e 0x00 0x08 0x04 0x00 0x26 0x31 0x32 0x33 0x34 0x33 0x34

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01

3) Invalid command:

Command sent: 0x7e 0x00 0x08 0x04 0x00 0x26 0x31 0x32 0x33 0x34 0x33

Message received: 0x02 0x00 0x03 0x01 0x00 0x6A 0x61



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

## Enable/Disable EEPROM Write

By default, EEPROM write is disabled after the device is powered up. You need to enable it before a write operation and recommendedly disable it afterwards to prevent miswriting.

**Syntax:** {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00

Types : 0x03 (EEPROM write enable)/ 0x00 (EEPROM write disable)

Lens : Byte count of Datas, 0x01 recommended.

Address : No specific significance.

Datas : No specific significance.

FCS : CRC-CCITT checksum (2 bytes).

Computation sequence: Types+ Lens+Address+Datas;  
polynomial:  $X^{16}+X^{12}+X^5+1$  (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) !=0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : 0x33 0x31 (CRC-CCITT checksum)

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Write EEPROM

The scanner has 512 bytes of EEPROM. The EEPROM write command is used to write data to up to 256 addresses. You need to enable EEPROM write before a write operation and recommendedly disable it afterwards to prevent miswriting. Note that writing without enabling it first will not return any error message. So it is recommended to implement EEPROM read operation after every write for verification.

**Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}**

Prefix1 : 0x7E 0x00

Types : 0x04

Lens : 0x00~0xFF, byte count of Datas. When Lens=0x00, 256 bytes are to be written.

Address : 0x0000~0xFFFF, starting address to write data to.

Datas : 0x00~0xFF, data to be written into the EEPROM

FCS : CRC-CCITT checksum (2 bytes).

Computation sequence: Types+ Lens+Address+Datas;

polynomial:  $X^{16}+X^{12}+X^5+1$  (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : 0x33 0x31 (CRC-CCITT checksum)

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) EEPROM not responding message:

Prefix2 : 0x02 0x00

Types : 0x02 (EEPROM not responding)

Lens : 0x01

Datas : 0x00

FCS : 0x5d 0x51 (CRC-CCITT checksum)

4) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Example:**

Write 0x51, 0x52, 0x53, 0x54 into 4 contiguous addresses starting from address 0x0000.

- 1) Write operation succeeds:

Command sent: 0x7e 0x00 0x04 0x04 0x00 0x00 **0x51 0x52 0x53 0x54 0xbc 0x17**

Message received: 0x02 0x00 0x00 0x01 0x00 0x33 0x31

- 2) Incorrect FCS:

Command sent: 0x7e 0x00 0x04 0x03 0x00 0x00 **0x51 0x52 0x53 0x54 0x33 0x34**

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

## Read EEPROM

The scanner has 512 bytes of EEPROM. The EEPROM read command is used to read the contents from 1 to 256 contiguous addresses of the EEPROM.

**Syntax:** {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00

Types : 0x05

Lens : 0x01

Address: 0x0000~0xFFFF (2 bytes), starting EEPROM address to read.

Datas : 0x00~0xFF, number of EEPROM addresses to be read. When Datas=0x00, 256 contiguous addresses are to be read.

FCS : CRC-CCITT checksum (2 bytes)

Computation sequence: Types+ Lens+Address+Datas;

polynomial:  $X^{16}+X^{12}+X^5+1(0x1021)$ , initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

**Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}**

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : Byte count of Datas returned.

Datas : 0x00~0xFF, data that are returned.

FCS : CRC-CCITT checksum.

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) EEPROM not responding message:

Prefix2 : 0x02 0x00

Types : 0x02 (EEPROM not responding)

Lens : 0x01

Datas : 0x00

FCS : 0x5d 0x51 (CRC-CCITT checksum)

4) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Example:**

Read the contents (0x35 0x36 0x37) of 3 contiguous EEPROM addresses starting from address 0x0005.

1) Read operation succeeds:

Command sent: 0x7e 0x00 0x05 0x01 0x00 0x05 **0x03** 0x9a 0x75

Message received: 0x02 0x00 0x00 0x03 **0x35** **0x36** **0x37** 0x2a 0xba

2) Incorrect FCS:

Command sent: 0x7e 0x00 0x05 0x01 0x00 0x05 **0x03** 0x33 0x34

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

## Registers

<b>Register</b>	0x0000
<b>Bit</b>	<b>Feature</b>
Bit 7	Reserved
Bit 6	1: Silent Mode Off 0: Silent Mode On
Bit 5-4	Reserved
Bit 3-2	Illumination: 00: Off 01: On When Scanning 10/11: Always On
Bit 1-0	Scan Mode: 00: Manual Mode 01: Command Trigger Mode 10: Continuous Mode 11: Sense Mode
<b>Register</b>	0x0003
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Sensitivity 0x00~0xFF: 0-255 levels. The smaller the value, the higher the sensitivity.
<b>Register</b>	0x0004
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Image Stabilization Timeout 0x00-0xFF: 0.0-25.5s
<b>Register</b>	0x0005
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Timeout between Decodes 0x00-0xFF: 0.0-25.5s
<b>Register</b>	0x0006
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Decode Session Timeout 0x00: Infinite time; 0x01-0xFF: 1-255s
<b>Register</b>	0x0007
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Timeout between Decodes (Same Barcode) 0x00: Infinite time; 0x01-0xFF: 0.1-25.5s



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x0009				
<b>Bit</b>	<b>Feature</b>				
Bit 7-5	Reserved				
Bit 4	0: RS-232 Communication	1: PS/2 Communication			
Bit 3-2	Reserved				
Bit 1-0	00: USB DataPipe	01: USB HID-KBW	10: USB COM Port Emulation 11: USB HID-POS		
<b>Register</b>	0x000A				
<b>Bit</b>	<b>Feature</b>				
Bit 7-5	Reserved				
Bit 4	0: Allow Rereading Same Barcode	1: Disallow Rereading Same Barcode			
Bit 3-2	Reserved				
Bit 1-0	Security Level 00-03: 0-3 level. The higher the value, the lower the error rate and efficiency.				
<b>Register</b>	0x000D				
<b>Bit</b>	<b>Feature</b>				
Bit 7-2	Reserved				
Bit 1	0: Video Reverse OFF	1: Video Reverse ON			
Bit 0	Reserved				
<b>Register</b>	0x000F				
<b>Bit</b>	<b>Feature</b>				
Bit 7-3	Reserved				
Bit 2-1	00: Do Not Transmit Programming Barcode Data	11: Transmit Programming Barcode Data			
Bit 0	0: Exit Setup	1: Enter Setup			
<b>Register</b>	0x0010				
<b>Bit</b>	<b>Feature</b>				
Bit 7-0	Good Read Beep Frequency 0xDA: Low	0x4B: Medium	0x25: High		
<b>Register</b>	0x0011				
<b>Bit</b>	<b>Feature</b>				
Bit 7-0	Good Read Beep Duration 0x1F: 40ms	0x3E: 80ms	0x5D: 120ms		
<b>Register</b>	0x0012				
<b>Bit</b>	<b>Feature</b>				
Bit 7-3	Reserved				
Bit 2	1: Good Read Beep On	0: Good Read Beep Off			
Bit 1-0	Reserved				



W010F00

Exit Setup



W010F01

\*\* Enter Setup

Register	0x0019		
Bit	Feature		
USB Country Keyboard Types			
Bit 7-0	00: U.S.	01: Belgium	02: Brazil
	03: Canada	04: Czech	05: Denmark
	06: Finland	07: France	08: Austria
	09: Greece	0A: Hungary	0B: Israel
	0C: Italy	0D: Latin America	0E: Netherland
	0F: Norway	10: Poland	11: Portugal
	12: Romania	13: Russia	15: Slovakia
	16: Spain	17: Sweden	18: Switzerland
	19: Turkey1	1A: Turkey2	1B: UK
	1C: Japan		
Register	0x001A		
Bit	Feature		
Bit 7-6	Inter-keystroke delay		
	00: No delay	01: Short delay (5ms)	
	10: Medium delay (10ms)	11: Long delay (15ms)	
Bit 5-3	Convert case		
	000: No Case Conversion	001: Invert Upper and Lower Case Characters	
	100/101: Convert All to Upper Case	110/111: Convert All to Lower Case	
Bit 2	1: Emulate Numeric Keypad	0: Do Not Emulate Numeric Keypad	
Bit 1-0	00: Standard Keyboard	01: Function Key Mapping	10/11: Emulate ALT+Keypad



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x0029		
<b>Bit</b>	<b>Feature</b>		
Bit 7-4	Reserved		
Bit 3	1: 8 Data Bits 0: 7 Data Bits		
Bit 2-1	Parity Check 00/01: None 10: Odd 11: Even		
Bit 0	1: 2 Stop Bits 0: 1 Stop Bit		
<b>Register</b>	0x002B, 0x2A		
<b>Bit</b>	<b>Feature</b>		
Bit 15-13	Reserved		
Bit 12-0	0x09C4: Baud Rate 1200 0x04E2: Baud Rate 2400 0x0271: Baud Rate 4800 0x0139: Baud Rate 9600 0x00D0: Baud Rate 14400 0x009C: Baud Rate 19200 0x004E: Baud Rate 38400 0x0034: Baud Rate 57600 0x001A: Baud Rate 115200		
<b>Register</b>	0x0031		
<b>Bit</b>	<b>Feature</b>		
Bit 7-6	Reserved		
Bit 5	1: Enable Decode Result Notification	0: Disable Decode Result Notification	
Bit 4	1: Enable Terminating Character Suffix	0: Disable Terminating Character Suffix	
Bit 3	1: Enable Custom Suffix	0: Disable Custom Suffix	
Bit 2	1: Enable Custom Prefix	0: Disable Custom Prefix	
Bit 1	1: Enable CODE ID Prefix	0: Disable CODE ID Prefix	
Bit 0	Prefix Sequence 1: Custom+Code ID+ AIM ID	0: Code ID+Custom+AIM ID	



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x0037-0x33	
<b>Bit</b>	<b>Feature</b>	
Bit 39-0	Set Custom Prefix	
<b>Register</b>	0x0042-0x3E	
<b>Bit</b>	<b>Feature</b>	
Bit 39-0	Set Custom Suffix	
<b>Register</b>	0x004D-0x49	
<b>Bit</b>	<b>Feature</b>	
Bit 39-0	Set Terminating Character Suffix	
<b>Register</b>	0x0061	
<b>Bit</b>	<b>Feature</b>	
Bit 7-1	Reserved	
Bit 0	1: Enable Code 128	0: Disable Code 128
<b>Register</b>	0x0062	
<b>Bit</b>	<b>Feature</b>	
Bit 7-2	Reserved	
Bit 1-0	00: Disable UCC/EAN 128	01: Decode as Code 128
10/11: Enable UCC/EAN 128		
<b>Register</b>	0x0063	
<b>Bit</b>	<b>Feature</b>	
Bit 7-2	Reserved	
Bit 1-0	00: Disable AIM 128	01: Decode as Code 128
10/11: Enable AIM 128		
<b>Register</b>	0x0065	
<b>Bit</b>	<b>Feature</b>	
Bit 7-6	EAN-8 Extension 00: Disable EAN-8 Zero Extend 10/11: Convert EAN-8 to EAN-13	01: Enable EAN-8 Zero Extend
Bit 5	1: Enable EAN-8 5-digit Add-on Code	0: Disable EAN-8 5-digit Add-on Code
Bit 4	1: Enable EAN-8 2-digit Add-on Code	0: Disable EAN-8 2-digit Add-on Code
Bit 3	1: EAN-8 Add-on Code Required	0: EAN-8 Add-on Code Not Required
Bit 2	1: Transmit EAN-8 Check Digit	0: Do Not Transmit EAN-8 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable EAN-8	0: Disable EAN-8



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x0066		
<b>Bit</b>	<b>Feature</b>		
Bit 7-6	Reserved		
Bit 5	1: Enable EAN-13 5-digit Add-on Code	0: Disable EAN-13 5-digit Add-on Code	
Bit 4	1: Enable EAN-13 2-digit Add-on Code	0: Disable EAN-13 2-digit Add-on Code	
Bit 3	1: EAN-13 Add-on Code Required	0: EAN-13 Add-on Code Not Required	
Bit 2	1: Transmit EAN-13 Check Digit	0: Do Not Transmit EAN-13 Check Digit	
Bit 1	Reserved		
Bit 0	1: Enable EAN-13	0: Disable EAN-13	
<b>Register</b>	0x0067		
<b>Bit</b>	<b>Feature</b>		
Bit 7-2	Reserved		
Bit 1-0	00: Disable ISSN	01: Decode as EAN-13	10/11: Enable ISSN
<b>Register</b>	0x0068		
<b>Bit</b>	<b>Feature</b>		
Bit 7-3	Reserved		
Bit 2	ISBN Format 1: ISBN-10	0: ISBN-13	
Bit 1-0	00: Disable ISBN	01: Decode as EAN-13	10/11: Enable ISBN
<b>Register</b>	0x0069		
<b>Bit</b>	<b>Feature</b>		
Bit 7-6	UPC-E Extension 00: Disable UPC-E extend 10/11: Convert UPC-E to UPC-A	01: Enable UPC-E extend	
Bit 5	1: Enable UPC-E 5-digit Add-on Code	0: Disable UPC-E 5-digit Add-on Code	
Bit 4	1: Enable UPC-E 2-digit Add-on Code	0: Disable UPC-E 2-digit Add-on Code	
Bit 3	1: UPC-E Add-on Code Required	0: UPC-E Add-on Code Not Required	
Bit 2	1: Transmit UPC-E Check Digit	0: Do Not Transmit UPC-E Check Digit	
Bit 1	Reserved		
Bit 0	1: Enable UPC-E	0: Disable UPC-E	



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x006A	
<b>Bit</b>	<b>Feature</b>	
Bit 7-6	Reserved	
Bit 5-4	UPC-E System Character 01: Do not transmit system character	10/11: Transmit system character
Bit 3-2	Reserved	
Bit 1-0	UPC-A Preamble Character 00: No Preamble	01: System Character 10/11: System Character & Country Code
<b>Register</b>	0x006B	
<b>Bit</b>	<b>Feature</b>	
Bit 7	Reserved	
Bit 6	1: Enable UPC-A 5-digit Add-on Code	0: Disable UPC-A 5-digit Add-on Code
Bit 5	1: Enable UPC-A 2-digit Add-on Code	0: Disable UPC-A 2-digit Add-on Code
Bit 4	1: UPC-A Add-on Code Required	0: UPC-A Add-on Code Not Required
Bit 3	1: Transmit UPC-A Check Digit	0: Do Not Transmit UPC-A Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable UPC-A	01: Decode as EAN-13 10/11: Enable UPC-A
<b>Register</b>	0x006C	
<b>Bit</b>	<b>Feature</b>	
Bit 7-4	Reserved	
Bit 3	1: Transmit Interleaved 2 of 5 Check Digit	0: Do Not Transmit Interleaved 2 of 5 Check Digit
Bit 2	1: Enable Interleaved 2 of 5 Check Digit	0: Disable Interleaved 2 of 5 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Interleaved 2 of 5	0: Disable Interleaved 2 of 5
<b>Register</b>	0x006D	
<b>Bit</b>	<b>Feature</b>	
Bit 7-4	Reserved	
Bit 3	1: Transmit ITF-6 Check Digit	0: Do Not Transmit ITF-6 Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable ITF-6	01: Decode as Interleaved 2 of 5 10/11: Enable ITF-6



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x006E		
<b>Bit</b>	<b>Feature</b>		
Bit 7-4	Reserved		
Bit 3	1: Transmit ITF-14 Check Digit	0: Do Not Transmit ITF-14 Check Digit	
Bit 2	Reserved		
Bit 1-0	00: Disable ITF-14	01: Decode as Interleaved 2 of 5	10/11: Enable ITF-14
<b>Register</b>	0x006F		
<b>Bit</b>	<b>Feature</b>		
Bit 7-4	Reserved		
Bit 3	1: Transmit Deutsche 14 Check Digit	0: Do Not Transmit Deutsche 14 Check Digit	
Bit 2	Reserved		
Bit 1-0	00: Disable Deutsche 14	01: Decode as Interleaved 2 of 5	10/11: Enable Deutsche 14
<b>Register</b>	0x0070		
<b>Bit</b>	<b>Feature</b>		
Bit 7-4	Reserved		
Bit 3	1: Transmit Deutsche 12 Check Digit	0: Do Not Transmit Deutsche 12 Check Digit	
Bit 2	Reserved		
Bit 1-0	00: Disable Deutsche 12	01: Decode as Interleaved 2 of 5	10/11: Enable Deutsche 12
<b>Register</b>	0x0071		
<b>Bit</b>	<b>Feature</b>		
Bit 7-4	Reserved		
Bit 3	1: Transmit Matrix 2 of 5 Check Digit	0: Do Not Transmit Matrix 2 of 5 Check Digit	
Bit 2	1: Enable Matrix 2 of 5 Check Digit	0: Disable Matrix 2 of 5 Check Digit	
Bit 1	Reserved		
Bit 0	1: Enable Matrix 2 of 5	0: Disable Matrix 2 of 5	
<b>Register</b>	0x0072		
<b>Bit</b>	<b>Feature</b>		
Bit 7-4	Reserved		
Bit 3	1: Transmit Industrial 25 Check Digit	0: Do Not Transmit Industrial 25 Check Digit	
Bit 2	1: Enable Industrial 25 Check Digit	0: Disable Industrial 25 Check Digit	
Bit 1	Reserved		
Bit 0	1: Enable Industrial 25	0: Disable Industrial 25	



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x0073	
<b>Bit</b>	<b>Feature</b>	
Bit 7-4	Reserved	
Bit 3	1: Transmit Standard 25 Check Digit	0: Do Not Transmit Standard 25 Check Digit
Bit 2	1: Enable Standard 25 Check Digit	0: Disable Standard 25 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Standard 25	0: Disable Standard 25
<b>Register</b>	0x0074	
<b>Bit</b>	<b>Feature</b>	
Bit 7-6	Reserved	
Bit 5	1: Enable Code 39 Full ASCII	0: Disable Code 39 Full ASCII
Bit 4	1: Transmit Code 39 Check Digit	0: Do Not Transmit Code 39 Check Digit
Bit 3	1: Enable Code 39 Check Digit	0: Disable Code 39 Check Digit
Bit 2	1: Transmit Code 39 Start/Stop Characters 0: Do Not Transmit Code 39 Start/Stop Characters	
Bit 1	Reserved	
Bit 0	1: Enable Code 39	0: Disable Code 39
<b>Register</b>	0x0075	
<b>Bit</b>	<b>Feature</b>	
Bit 7	Reserved	
Bit 6	1: Transmit Codabar Check Digit	0: Do Not Transmit Codabar Check Digit
Bit 5	1: Enable Codabar Check Digit	0: Disable Codabar Check Digit
Bit 4-3	Codabar Start/Stop Character Format: 00: ABCD/ABCD 10: abcd/abcd	
	01: ABCD/TN*E 11: abcd/tn*e	
Bit 2	1: Transmit Codabar Start/Stop Characters 0: Do Not Transmit Codabar Start/Stop Characters	
Bit 1	Reserved	
Bit 0	1: Enable Codabar	0: Disable Codabar



W010F00

Exit Setup



W010F01

\*\* Enter Setup

<b>Register</b>	0x0076	
<b>Bit</b>	<b>Feature</b>	
Bit 7-4	Reserved	
Bit 3	1: Transmit Code 93 Check Digit	0: Do Not Transmit Code 93 Check Digit
Bit 2	1: Enable Code 93 Check Digit	0: Disable Code 93 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Code 93	0: Disable Code 93
<b>Register</b>	0x0077	
<b>Bit</b>	<b>Feature</b>	
Bit 7-6	Reserved	
Bit 5	1: Transmit Code 11 Check Digit	0: Do Not Transmit Code 11 Check Digit
Bit 4-2	Code 11 Check Digit Verification: 000: Disable 001: One Check Digit, MOD11 010: Two Check Digits, MOD11/MOD11 011: Two Check Digits, MOD11/MOD9 100: One Check Digit, MOD11 (Len <= 11); Two Check Digits, MOD11/MOD11 (Len > 11) 101: One Check Digit, MOD11 (Len <= 11); Two Check Digits, MOD11/MOD9 (Len > 11)	
Bit 1	Reserved	
Bit 0	1: Enable Code 11	0: Disable Code 11
<b>Register</b>	0x0078	
<b>Bit</b>	<b>Feature</b>	
Bit 7-4	Reserved	
Bit 3	1: Transmit Plessey Check Digit	0: Do Not Transmit Plessey Check Digit
Bit 2	1: Enable Plessey Check Digit	0: Disable Plessey Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Plessey	0: Disable Plessey



W010F00

Exit Setup



W010F01

\*\* Enter Setup

Register	0x0079	
Bit	Feature	
Bit 7-5	Reserved	
Bit 4	1: Transmit MSI-Plessey Check Digit	0: Do Not Transmit MSI-Plessey Check Digit
Bit 3-2	MSI-Plessey Check Digit Verification: 00: Disable 01: One Check Digit, MOD10 10: Two Check Digits, MOD10/MOD10 11: Two Check Digits, MOD10/MOD11	
	Bit 1	
	Bit 0	
	1: Enable MSI-Plessey	0: Disable MSI-Plessey
Register	0x007A	
Bit	Feature	
Bit 7-3	Reserved	
Bit 2	1: Transmit RSS-14 Application Identifier	0: Do Not Transmit RSS-14 Application Identifier
Bit 1	Reserved	
Bit 0	1: Enable RSS-14	0: Disable RSS-14
Register	0x007B	
Bit	Feature	
Bit 7-3	Reserved	
Bit 2	1: Transmit RSS-Limited Application Identifier	0: Do Not Transmit RSS-Limited Application Identifier
Bit 1	Reserved	
Bit 0	1: Enable RSS-Limited	0: Disable RSS-Limited
Register	0x007C	
Bit	Feature	
Bit 7-1	Reserved	
Bit 0	1: Enable RSS-Expand	0: Disable RSS-Expand



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

<b>Register</b>	0x0080
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 128 Maximum Length
<b>Register</b>	0x0081
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 128 Minimum Length
<b>Register</b>	0x0082
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set UCC/EAN-128 Maximum Length
<b>Register</b>	0x0083
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set UCC/EAN-128 Minimum Length
<b>Register</b>	0x0084
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set AIM 128 Maximum Length
<b>Register</b>	0x0085
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set AIM 128 Minimum Length
<b>Register</b>	0x0086
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Interleaved 2 of 5 Maximum Length
<b>Register</b>	0x0087
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Interleaved 2 of 5 Minimum Length
<b>Register</b>	0x0088
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Matrix 2 of 5 Maximum Length
<b>Register</b>	0x0089
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Matrix 2 of 5 Minimum Length



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

<b>Register</b>	0x008A
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Industrial 25 Maximum Length
<b>Register</b>	0x008B
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Industrial 25 Minimum Length
<b>Register</b>	0x008C
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Standard 25 Maximum Length
<b>Register</b>	0x008D
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Standard 25 Minimum Length
<b>Register</b>	0x008E
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 39 Maximum Length
<b>Register</b>	0x008F
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 39 Minimum Length
<b>Register</b>	0x0090
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Codabar Maximum Length
<b>Register</b>	0x0091
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Codabar Minimum Length
<b>Register</b>	0x0092
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 93 Maximum Length
<b>Register</b>	0x0093
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 93 Minimum Length



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

<b>Register</b>	0x0094
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 11 Maximum Length
<b>Register</b>	0x0095
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Code 11 Minimum Length
<b>Register</b>	0x0096
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Plessey Maximum Length
<b>Register</b>	0x0097
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set Plessey Minimum Length
<b>Register</b>	0x0098
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set MSI-Plessey Maximum Length
<b>Register</b>	0x0099
<b>Bit</b>	<b>Feature</b>
Bit 7-0	Set MSI-Plessey Minimum Length
<b>Register</b>	0x00A1, 0x00A0
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Code 128 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00A3, 0x00A2
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set UCC/EAN-128 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00A5, 0x00A4
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set AIM 128 Code ID ASCII value of one or two English letters (lower or upper case)



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

<b>Register</b>	0x00A9, 0x00A8
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set EAN-8 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00AB, 0x00AA
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set EAN-13 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00AD, 0x00AC
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set ISSN Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00B1, 0x00B0
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set UPC-E Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00B3, 0x00B2
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set UPC-A Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00B5, 0x00B4
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Interleaved 2 of 5 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00B7, 0x00B6
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set ITF-6 Code ID ASCII value of one or two English letters (lower or upper case)



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

<b>Register</b>	0x00B9, 0x00B8
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set ITF-14 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00BB, 0x00BA
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Deutsche 14 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00BD, 0x00BC
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Deutsche 12 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00BF, 0x00BE
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Matrix 2 of 5 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00C1, 0x00C0
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Industrial 25 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00C3, 0x00C2
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Standard 25 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00C5, 0x00C4
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Code 39 Code ID ASCII value of one or two English letters (lower or upper case)



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

<b>Register</b>	0x00C7, 0x00C6
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Codabar Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00C9, 0x00C8
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Code 93 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00CB, 0x00CA
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Code 11 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00CD, 0x00CC
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set Plessey Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00CF, 0x00CE
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set MSI-Plessey Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00D1, 0x00D0
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set RSS-14 Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00D3, 0x00D2
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set RSS-Limited Code ID ASCII value of one or two English letters (lower or upper case)
<b>Register</b>	0x00D5, 0x00D4
<b>Bit</b>	<b>Feature</b>
Bit 15-0	Set RSS-Expand Code ID ASCII value of one or two English letters (lower or upper case)



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## Enable/Disable Barcode Programming

Scanning the **Enter Setup/Exit Setup** barcode can enable/disable barcode programming. After barcode programming is enabled, you can scan a number of programming barcodes to configure your scanner.

Barcode programming is on by default. In real application, programming barcodes hardly overlap with non-programming barcodes, so it is unnecessary to disable barcode programming each time you finish the configuration.

## Programming Barcode Data

Programming barcode data (e.g. WFFD980) can be transmitted to the Host. To enable this feature, scan the appropriate barcode below. By default, the scanner does not transmit programming barcode data.

When the scanner is powered down or rebooted, this feature will be automatically disabled (i.e. the scanner does not transmit programming barcode data).



W060F06  
Transmit Programming Barcode Data



W060F00  
\*\* Do Not Transmit Programming Barcode Data



W010F00  
Exit Setup

---



W010F01

\*\* Enter Setup

---

## Factory Defaults

Scanning the following barcode can restore the scanner to the factory defaults.

You may need to reset your scanner when:

1. scanner is not properly configured so that it fails to decode barcodes;
2. you forget previous configuration and want to avoid its impact;
3. functions that are rarely used have been enabled for the time being.



WFFD980

Restore All Factory Defaults



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## Scan Mode

### Manual Mode

**Manual Mode** (default): A trigger pull activates a decode session. The decode session continues until the barcode is decoded or the trigger is released or the decode session timeout expires.



W030000  
\*\* Manual Mode

**Decode Session Timeout:** This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D  
Decode Session Timeout

### Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
  2. Scan the **Decode Session Timeout** barcode.
  3. Scan the numeric barcode “5”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Exit Setup** barcode.
- 



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

## Continuous Mode

**Continuous Mode:** A trigger press activates the scanner to scan and decode at user-specified intervals, i.e. the timeout between decodes. Each decode session lasts until barcode is decoded or the decode session timeout expires. To suspend/resume the operation, simply press the trigger. By default, the scanner rereads same barcode with no delay.



W030002

Continuous Mode

**Decode Session Timeout:** This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D

Decode Session Timeout

### Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcode “5”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Timeout between Decodes:** This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 0.1s increments from 0.0s to 25.5s. The default timeout is 1.0s.



M00031C

Timeout between Decodes

**Example: Set the timeout between decodes to 5s**

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

**Reread Delay** sets the time period before the scanner can read the same barcode a second time. It protects against accidental rereads of the same barcode. This parameter is programmable in 0.1s increments from 0.1s to 25.5s. The default delay is 3.0s. If the parameter is set to 0, the delay is infinite.

**Note:** This parameter only applies when the **Reread Same Barcode with a Delay** is enabled.



M00031E

Reread Delay

**Reread Same Barcode with No Delay:** The scanner is allowed to reread same barcode, ignoring the reread delay.

**Reread Same Barcode with a Delay:** The scanner is not allowed to reread same barcode before the reread delay expires.

To disable rereads of same barcode, enable the **Reread Same Barcode with a Delay** and set the delay to 0.



W100A00

\*\* Reread Same Barcode with No Delay



W100A10

Reread Same Barcode with a Delay

### Example: Set the reread delay to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Reread Delay** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## Sense Mode

**Sense Mode:** The scanner activates a decode session every time when it detects a change in ambient illumination and meets the requirement of the image stabilization timeout. Decode session continues until barcode is decoded or the decode session timeout expires. A trigger pull can also activate a decode session. By default, the scanner rereads same barcode with no delay.



W030003  
Sense Mode

**Decode Session Timeout:** This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D  
Decode Session Timeout

### Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
  2. Scan the **Decode Session Timeout** barcode.
  3. Scan the numeric barcode “5”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Exit Setup** barcode.
- 



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

**Image Stabilization Timeout:** The scanner waits for the image stabilization timeout to expire before activating a decode session every time it detects a change in ambient illumination. This parameter is programmable in 0.1s increments from 0.0s to 25.5s. The default timeout is 0.4s.



M00031B

Image Stabilization Timeout

**Example: Set the Image Stabilization Timeout to 5s**

1. Scan the **Enter Setup** barcode.
2. Scan the **Image Stabilization Timeout** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Reread Delay** sets the time period before the scanner can read the same barcode a second time. It protects against accidental rereads of the same barcode. This parameter is programmable in 0.1s increments from 0.1s to 25.5s. The default delay is 3.0s. If the parameter is set to 0, the delay is infinite.

**Note:** This parameter only applies when the **Reread Same Barcode with a Delay** is enabled.



M00031E

Reread Delay

**Reread Same Barcode with No Delay:** The scanner is allowed to reread same barcode, ignoring the reread delay.

**Reread Same Barcode with a Delay:** The scanner is not allowed to reread same barcode before the reread delay expires.

To disable rereads of same barcode, enable the **Reread Same Barcode with a Delay** and set the delay to 0.



W100A00

\*\* Reread Same Barcode with No Delay



W100A10

Reread Same Barcode with a Delay

#### Example: Set the reread delay to 5s

1. Scan the **Enter Setup** barcode.
  2. Scan the **Reread Delay** barcode.
  3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Exit Setup** barcode.
- 



W010F00

Exit Setup



W010F01

\*\* Enter Setup

**Sensitivity:** This parameter specifies the degree of acuteness of the scanner's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the scanner. You can select an appropriate degree of sensitivity that fits the ambient environment.



WFF0305

High Sensitivity



WFF0310

\*\* Medium Sensitivity



WFF0330

Low Sensitivity



M00031A

Custom Sensitivity

Sensitivity levels range from 0 to 255. The smaller the number, the higher the sensitivity.

**Example: Set the sensitivity level to 10**

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Sensitivity** barcode.
3. Scan the numeric barcodes “1” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

### Command Trigger Mode

**Command Trigger Mode:** Decode session is activated by a host command. The decode session continues until the barcode is decoded or the decode session timeout expires.



W030001  
Command Trigger Mode

**Decode Session Timeout:** This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D  
Decode Session Timeout

### Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
  2. Scan the **Decode Session Timeout** barcode.
  3. Scan the numeric barcode “5”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Exit Setup** barcode.
- 



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

## Hands-free Scanning

Inserting the scanner in the stand enables the scanner to switch from its current scan mode to the Sense mode. When the scanner is removed from the stand, it operates in the Manual scan mode. **It takes 3 seconds for the scanner to get ready for scanning after the scanner is inserted into or removed from the stand, so do not operate the scanner during this period.**



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Security Level

This parameter specifies the number of times to decode a barcode during a scan attempt. The higher the security level, the lower the error rate and decoding efficiency.



W030A00

\*\* Set Security Level to 0



W030A01

Set Security Level to 1



W030A02

Set Security Level to 2



W030A03

Set Security Level to 3



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

---

## Good Read Beep



W041204

\*\* Good Read Beep On



W041200

Good Read Beep Off



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Good Read Beep Frequency



WFF10DA

Low



WFF104B

\*\* Medium



WFF1025

High

### Good Read Beep Duration



WFF111F

40ms



WFF113E

\*\*80ms



WFF115D

120ms

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Decode Result Notification

When enabled, if a barcode does not decode, "F" is transmitted; if a barcode is decoded, "S" is appended to the barcode data as the most left character.



W203120

Enable Decode Result Notification



W203100

\*\* Disable Decode Result Notification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Other Settings

You can change the following parameter settings temporarily and the changes will be lost when you power down or reboot the scanner.

### Silent Mode



W400000

Silent Mode On



W400040

\*\* Silent Mode Off

**Note:** This feature is only applicable to decode beep and will be automatically disabled when the scanner is powered down or rebooted.

### Illumination



W0C0000

Off



W0C0008

Always On



W0C0004

\*\* On When Scanning

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Chapter 3 Communication Settings

### Introduction

The scanner provides an RS-232 interface, a USB interface and a PS/2 interface to communicate with the host device. The host device can receive scanned data and send commands to control the scanner or to access/alter the configuration information of the scanner via the RS-232 or USB or PS/2 interface.

### RS-232 Interface

Serial communication interface is usually used to connect the scanner to a host device (like PC, POS). When the scanner is connected to a host device through its RS-232 interface, you need to set communication parameters to match the host device.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the scanner's baud rate to match the Host requirements.



WFFD9D3

\*\* 9600



WFFD9D0

1200



WFFD9D5

19200



WFFD9D1

2400



WFFD9D6

38400



WFFD9D2

4800



WFFD9D7

57600



WFFD9D4

14400



WFFD9D8

115200

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Parity Check



W062900

\*\* None



W062906

Even Parity



W062904

Odd Parity

## Stop Bit



W012900

\*\* 1 Stop Bit



W012901

2 Stop Bits

---



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

### Data Bit



W082908

8 Data Bits



W0F2908

\*\* 8 Data Bits, No Parity, 1 Stop Bit



W0F290E

8 Data Bits, Even Parity, 1 Stop Bit



W0F290C

8 Data Bits, Odd Parity, 1 Stop Bit



W0F2909

8 Data Bits, No Parity, 2 Stop Bits



W0F290F

8 Data Bits, Even Parity , 2 Stop Bits



W0F290D

8 Data Bits, Odd Parity, 2 Stop Bits



W082900

7 Data Bits



W010F00  
Exit Setup

---



W010F01

\*\* Enter Setup

---



W0F2906

7 Data Bits, Even Parity, 1 Stop Bit



W0F2904

7 Data Bits, Odd Parity, 1 Stop Bit



W0F2907

7 Data Bits, Even Parity, 2 Stop Bits



W0F2905

7 Data Bits, Odd Parity, 2 Stop Bits



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## USB Interface

When the scanner is connected to a host device through its USB interface, **USB HID-KBW** is enabled by default. User can switch between options – **USB DATAPIPE**, **USB HID-KBW**, **USB COM Port Emulation** and **HID-POS**, upon actual need.

### USB HID-KBW



W070901

\*\* USB HID-KBW



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

### Standard Keyboard

When the USB HID-KBW feature is enabled, the scanner selects **Standard Keyboard** by default. Besides that, the other two options are provided: **Emulate ALT+Keypad** and **Function Key Mapping**.



W031A00

\*\* Standard Keyboard

### Emulate ALT+Keypad

When **Emulate ALT+Keypad** is enabled, any ASCII character (0x00 - 0xFF) is sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

1. ALT Make
2. Enter the number corresponding to the ASCII character on the keypad.
3. ALT Break



W031A03

Emulate ALT+Keypad

**Note:** It is recommended to turn on the Num Lock light on the host when using this feature.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Function Key Mapping

When **Function Key Mapping** is enabled, function character (0x00 - 0x1F) are sent as ASCII sequences over the numeric keypad.

1. CTRL Make
2. Press function key (Refer to the **ASCII Function Key Mapping Table** on the following page)
3. CTRL Break



W031A01

Function Key Mapping



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

**ASCII Function Key Mapping Table**

ASCII Value (HEX)	Function Key	ASCII Value (HEX)	Function Key
00	2	10	P
01	A	11	Q
02	B	12	R
03	C	13	S
04	D	14	T
05	E	15	U
06	F	16	V
07	G	17	W
08	H	18	X
09	I	19	Y
0A	J	1A	Z
0B	K	1B	[
0C	L	1C	\
0D	M	1D	]
0E	N	1E	6
0F	O	1F	.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### USB Country Keyboard Types

Keyboard layouts vary from country to country. All supported keyboard types are listed below.



**WFF1900**

\*\* 1 - U.S.



**WFF1901**

2 - Belgium



**WFF1902**

3 - Brazil



**WFF1903**

4 - Canada



**WFF1904**

5 - Czech



**WFF1905**

6 - Denmark



**WFF1906**

7 - Finland



**WFF1907**

8 - France



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

---



WFF1908

9 - Austria



WFF1909

10 - Greece



WFF190A

11 - Hungary



WFF190B

12 - Israel



WFF190C

13 - Italy



WFF190D

14 - Latin America



WFF190E

15 - Netherland



WFF190F

16 - Norway



WFF1910

17 - Poland



WFF1911

18 - Portugal

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---



WFF1912

19 - Romania



WFF1913

20 - Russia



WFF1915

21 - Slovakia



WFF1916

22 - Spain



WFF1917

23 - Sweden



WFF1918

24 - Switzerland



WFF1919

25 - Turkey1



WFF191A

26 - Turkey2



WFF191B

27 - UK



WFF191C

28 - Japan

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes.



WC01A00

\*\* No Delay



WC01A40

Short Delay (5ms)



WC01A80

Medium Delay (10ms)



WC01AC0

Long Delay (15ms)



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

### Convert Case

This parameter is valid when the **Standard Keyboard or Function Key Mapping** is enabled.



W381A00

\*\* No Case Conversion



W381A20

Convert All to Upper Case



W381A30

Convert All to Lower Case



W381A08

Invert Upper and Lower Case Characters

**Example:** When the **Convert All to Lower Case** feature is enabled, barcode data “AbC” is transmitted as “abc”.



W010F00  
Exit Setup

---



W010F01

\*\* Enter Setup

### Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke on numeric keypad, whereas sending other character like “+”, “\_”, “\*” , “/” and “.” is still emulated as keystroke on main keyboard. However, this feature is influenced by the state of the Num Lock key on the host: if the Num Lock light on the host is ON, numbers are sent over numeric keypad, if it is OFF, numbers are sent over main keyboard.



W041A04

Emulate Numeric Keypad



W041A00

\*\* Do Not Emulate Numeric Keypad

**Note:** Make sure the Num Lock light of the Host is turned ON when using this feature.

**Emulate ALT+Keypad ON** prevails over **Emulate Numeric Keypad**.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## USB COM Port Emulation

This feature allows the host to receive data in the way as a serial port does. However, you need to set communication parameters on the scanner to match the Host requirements. A driver is required for this feature.



W070902

USB COM Port Emulation



W010F00

Exit Setup

---




W010F01

\*\* Enter Setup

---

## USB DataPipe

A driver is required when using this protocol to communicate with the scanner.



W070900

USB DataPipe



W010F00

Exit Setup



W010F01

**\*\* Enter Setup**

---

## HID-POS

The HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than USB HID-KBW.

Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than USB HID-KBW and traditional RS-232 interface.

**Note:** HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



W070903

**HID-POS**



W010F00

**Exit Setup**

---



W010F01

\*\* Enter Setup

## Access the Scanner with Your Program

1. Use CreateFile to access the scanner as a HID device.
2. Use ReadFile to deliver the scanned data to the application program.
3. Use WriteFile to send data to the scanner.

For detailed information about USB and HID interfaces, go to [www.USB.org](http://www.USB.org).

## Acquire Scanned Data

After a barcode is decoded, the scanner sends an input report as below:

Byte	Bit								
	7	6	5	4	3	2	1	0	
0	Report ID = 02								
1	Barcode Length								
2-57	Decoded Data (1-56)								
58-61	Reserved (1-4)								
62	00								
63	00 (no data continued) or 01 (data continued)								

## VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A range of PIDs are used for each Newland product family. Every PID contains a base number and interface type (keyboard, COM port, etc.).

Product	Interface	PID (Hex)	PID (Dec)
HR11	USB DataPipe	8001	32769
	USB HID-KBW	8003	32771
	USB COM Port Emulation	8002	32770
	HID-POS	8010	32784



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## PS/2 Interface

When the scanner is connected to a host device through its PS/2 interface, users need to scan the following barcode to enable the PS/2 port.



PS/2-KBW

To switch from PS/2 to RS-232, scan the barcode below.



RS-232



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Chapter 4 Prefix & Suffix

### Introduction

After a successful barcode read, a string containing numbers, letters or symbols will be returned.

In real applications, barcode data may be found insufficient for your needs. You may wish to include additional information such as barcode type, data acquisition time or delimiter in data being scanned.

Adding extra information to printed barcodes does not seem like a sensible solution since that will increase the barcode size and make them inflexible. Instead, we come up with the idea of appending prefix and suffix to the data without making any change to barcodes. We will show you how to conduct the configuration in the following sections.

**Note:** Customized data: <Prefix> <Data><Suffix><Terminating Character>

### Prefix Sequence



W013100

\*\* Code ID+Custom+AIM ID



W013101

Custom+Code ID+ AIM ID



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## Custom Prefix

### Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 5 characters.

For example, if barcode data is “123” and custom prefix is “AB”, the Host will receive “AB123”.



W043104  
Enable Custom Prefix



W043100  
\*\* Disable Custom Prefix

### Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired prefix and the **Save** barcode.

**Note:** A custom prefix cannot exceed 5 characters.



M000100  
Set Custom Prefix

**Example: Set the custom prefix to “CODE” (its hexadecimal value is 0x43/0x4F/0x44/0x45)**

1. Scan the **Enter Setup** barcode.
  2. Scan the **Set Custom Prefix** barcode.
  3. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Enable Custom Prefix** barcode.
  6. Scan the **Exit Setup** barcode.
- 



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

## AIM ID Prefix

AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the **AIM ID Table** section in Appendix). If AIM ID prefix is enabled, the scanner will add the symbology identifier before the scanned data after decoding.



W186018

Enable AIM ID Prefix



W186000

\*\* Disable AIM ID Prefix



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## CODE ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. For the information of default Code ID, see the **Code ID Table** section in Appendix.



W023102  
Enable CODE ID Prefix



W023100  
\*\* Disable CODE ID Prefix

## Restore All Default Code IDs



WFFD9C2  
Restore All Default Code IDs

## Set Code ID

Code ID can only consist of one or two English letters. To set a Code ID, scan a **Set Code ID** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired ID and the **Save** barcode.

**Example: Set the Code ID of Code 128 to “p” (its hexadecimal value is 0x70)**

1. Scan the **Enter Setup** barcode.
  2. Scan the **Set Code 128 Code ID** barcode. (See the barcode on the following page )
  3. Scan the numeric barcodes “7” and “0”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Exit Setup** barcode.
- 



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

### Set Code ID Barcodes



M000200

Set Code 128 Code ID



M000201

Set UCC/EAN-128 Code ID



M000202

Set AIM 128 Code ID



M000204

Set EAN-8 Code ID



M000205

Set EAN-13 Code ID



M000206

Set ISSN Code ID



M000207

Set ISBN Code ID



M000208

Set UPC-E Code ID

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Set Code ID Barcodes (continued)



M000209

Set UPC-A Code ID



M00020A

Set Interleaved 2 of 5 Code ID



M00020B

Set ITF-6 Code ID



M00020C

Set ITF-14 Code ID



M00020D

Set Deutsche 14 Code ID



M00020E

Set Deutsche 12 Code ID



M00020F

Set Matrix 2 of 5 Code ID



M000210

Set Industrial 25 Code ID

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

**Set Code ID Barcodes (continued)**



M000211

Set Standard 25 Code ID



M000212

Set Code 39 Code ID



M000213

Set Codabar Code ID



M000214

Set Code 93 Code ID



M000215

Set Code 11 Code ID



M000216

Set Plessey Code ID



M000217

Set MSI-Plessey Code ID



M000218

Set RSS-14 Code ID



M000219

Set RSS-Limited Code ID



M00021A

Set RSS-Expand Code ID



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Custom Suffix

### Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 5 characters.

For example, if barcode data is “123” and custom suffix is “AB”, the Host will receive “123AB”.



W083108

Enable Custom Suffix



W083100

\*\* Disable Custom Suffix



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

---

## Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired suffix and the **Save** barcode.

**Note:** A custom suffix cannot exceed 5 characters.



M000101

Set Custom Suffix

**Example: Set the custom suffix to “AGE” (its hexadecimal value is 0x41/0x47/0x45)**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Custom Suffix** barcode.
3. Scan the numeric barcodes “4”“1”“4”“7”“4” and “5”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Enable Custom Suffix** barcode.
6. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Terminating Character Suffix

A terminating character, such as carriage return (CR) and line feed (LF), can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix cannot exceed 5 characters.

### Enable/Disable Terminating Character Suffix

To enable/disable terminating character suffix, scan the appropriate barcode below.



W103110

\*\* Enable Terminating Character Suffix



W103100

Disable Terminating Character Suffix



W010F00

Exit Setup

---



W010F01

\*\* Enter Setup

## Set Terminating Character Suffix

The scanner provides a shortcut for setting the terminating character suffix to 0x0D (CR) or 0x0D,0x0A (CRLF) or 0x09 (Horizontal Tab) by scanning the following barcode.



WFFD9C3

Terminating Character 0x0D



WFFD9C4

\*\* Terminating Character 0x0D,0x0A



WFFD9C5

Terminating Character 0x09



M000102

Set Terminating Character Suffix

To set other terminating character suffix, scan the **Set Terminating Character Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired terminating character, and the **Save** barcode.

**Note:** A terminating character suffix cannot exceed 5 characters.

### Example: Set the terminating character suffix to 0x0A

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode.
3. Scan the numeric barcodes “0” and “A”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Enable Terminating Character Suffix** barcode.
6. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

## Chapter 5 Symbologies

### Introduction

Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the scanner so that it can identify various barcode symbologies. It is recommended to disable those that are rarely used to increase the efficiency of the scanner.

### Global Settings

#### Enable/Disable All Symbologies

If all symbologies are disabled, the scanner can only identify programming barcodes.



WFFD981  
Enable All Symbologies



WFFD982  
Disable All Symbologies

### Video Reverse

Video Reverse allows the scanner to read barcodes that are inverted.

**Video Reverse ON:** Read both regular barcodes and inverse barcodes.

**Video Reverse OFF:** Read regular barcodes only.



W020D00

\*\* Video Reverse OFF



W020D02

Video Reverse ON



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Code 128

### Restore Factory Defaults



WFFD990

Restore the Factory Defaults of Code 128

### Enable/Disable Code 128



W016101

\*\* Enable Code 128



W016100

Disable Code 128

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Set Length Range for Code 128

The scanner can be configured to only decode Code 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Code 128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 128 barcodes with that length are to be decoded.



M000301

Set the Minimum Length



M000300

Set the Maximum Length

#### Example: Set the scanner to decode Code128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## UCC/EAN-128

### Restore Factory Defaults



WFFD991

Restore the Factory Defaults of UCC/EAN-128

### Enable/Disable UCC/EAN-128



W036203

\*\* Enable UCC/EAN-128



W036200

Disable UCC/EAN-128



W036201

Decode as Code 128



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Set Length Range for UCC/EAN-128

The scanner can be configured to only decode UCC/EAN-128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes UCC/EAN-128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only UCC/EAN-128 barcodes with that length are to be decoded.



M000303

Set the Minimum Length



M000302

Set the Maximum Length

**Example: Set the scanner to decode UCC/EAN-128 barcodes containing between 8 and 12 characters**

1. Scan the **Enter Setup** barcode.
  2. Scan the **Set the Minimum Length** barcode.
  3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
  4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
  5. Scan the **Set the Maximum Length** barcode.
  6. Scan the numeric barcodes “1” and “2”.
  7. Scan the **Save** barcode.
  8. Scan the **Exit Setup** barcode.
- 



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## AIM 128

### Restore Factory Defaults



WFFD992

Restore the Factory Defaults of AIM 128

### Enable/Disable AIM 128



W036302

Enable AIM 128



W036300

\*\* Disable AIM 128



W036301

Decode as Code 128

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Set Length Range for AIM 128

The scanner can be configured to only decode AIM 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes AIM 128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only AIM 128 barcodes with that length are to be decoded.



M000305

Set the Minimum Length



M000304

Set the Maximum Length

### Example: Set the scanner to decode AIM128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## EAN-8

### Restore Factory Defaults



WFFD994

Restore the Factory Defaults of EAN-8

### Enable/Disable EAN-8



W016501

\*\* Enable EAN-8



W016500

Disable EAN-8

### Transmit Check Digit

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



W046504

\*\* Transmit EAN-8 Check Digit



W046500

Do Not Transmit EAN-8 Check Digit



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



W106510

Enable 2-Digit Add-On Code



W106500

\*\* Disable 2-Digit Add-On Code



W206520

Enable 5-Digit Add-On Code



W206500

\*\* Disable 5-Digit Add-On Code

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W086508

EAN-8 Add-On Code Required



W086500

\*\* EAN-8 Add-On Code Not Required

## EAN-8 Extension

**Disable EAN-8 Zero Extend:** Transmit EAN-8 barcodes as is.

**Enable EAN-8 Zero Extend:** Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.

**Convert EAN-8 to EAN-13:** Add five leading zeros to decoded EAN-8 barcodes to make them compatible in format to EAN-13 barcodes.



WC06540

Enable EAN-8 Zero Extend



WC06500

\*\* Disable EAN-8 Zero Extend



WC06580

Convert EAN-8 to EAN-13



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## EAN-13

### Restore Factory Defaults



WFFD995

Restore the Factory Defaults of EAN-13

### Enable/Disable EAN-13



W016601

\*\* Enable EAN-13



W016600

Disable EAN-13

### Transmit Check Digit

EAN-13 is 13 digits in length with the last one as its check digit used to verify the integrity of the data.



W046604

\*\* Transmit EAN-13 Check Digit



W046600

Do Not Transmit EAN-13 Check Digit

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-13 barcode while the part circled by red dotted line is add-on code.



W106610

Enable 2-Digit Add-On Code



W106600

\*\* Disable 2-Digit Add-On Code



W206620

Enable 5-Digit Add-On Code



W206600

\*\* Disable 5-Digit Add-On Code

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W086608

EAN-13 Add-On Code Required



W086600

\*\* EAN-13 Add-On Code Not Required

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## ISSN

### Restore Factory Defaults



WFFD996

Restore the Factory Defaults of ISSN

### Enable/Disable ISSN



W036702

Enable ISSN



W036700

\*\* Disable ISSN



W036701

Decode as EAN-13

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## ISBN

### Restore Factory Defaults



WFFD997

Restore the Factory Defaults of ISBN

### Enable/Disable ISBN



W036802

Enable ISBN



W036800

\*\* Disable ISBN



W036801

Decode as EAN-13

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Set ISBN Format



W086800

\*\* ISBN-13



W086808

ISBN-10



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## UPC-E

### Restore Factory Defaults



WFFD998

Restore the Factory Defaults of UPC-E

### Enable/Disable UPC-E



W016901

\*\* Enable UPC-E



W016900

Disable UPC-E

### Transmit Check Digit

UPC-E is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



W046904

\*\* Transmit UPC-E Check Digit



W046900

Do Not Transmit UPC-E Check Digit

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is a UPC-E barcode while the part circled by red dotted line is add-on code.



W106910

Enable 2-Digit Add-On Code



W106900

\*\* Disable 2-Digit Add-On Code



W206920

Enable 5-Digit Add-On Code



W206900

\*\* Disable 5-Digit Add-On Code

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W086908

UPC-E Add-On Code Required



W086900

\*\* UPC-E Add-On Code Not Required

### Transmit System Character

The first character of UPC-E barcode is the system character.



W306A10

Do Not Transmit System Character



W306A20

\*\* Transmit System Character

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## UPC-E Extension

**Disable UPC-E Extend:** Transmit UPC-E barcodes as is.

**Enable UPC-E Extend:** Extend UPC-E barcodes to make them compatible in length to UPC-A.

**Convert UPC-E to UPC-A:** Extend UPC-E barcodes to make them compatible in format to UPC-A.



WC06940

Enable UPC-E Extend



WC06900

\*\*Disable UPC-E Extend



WC06980

Convert UPC-E to UPC-A



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## UPC-A

**Restore Factory Defaults**



**WFFD999**

Restore the Factory Defaults of UPC-A

**Enable/Disable UPC-A**



**W036B02**

\*\* Enable UPC-A



**W036B00**

Disable UPC-A



**W036B01**

Decode as EAN-13

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Transmit Check Digit

UPC-A is 13 digits in length with the last one as its check digit used to verify the integrity of the data.



W086B08

\*\* Transmit UPC-A Check Digit



W086B00

Do Not Transmit UPC-A Check Digit

## Transmit Preamble Character

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A barcode. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.



W036A00

No Preamble



W036A01

\*\* System Character



W036A02

System Character & Country Code



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is a UPC-A barcode while the part circled by red dotted line is add-on code.



W206B20

Enable 2-Digit Add-On Code



W206B00

\*\* Disable 2-Digit Add-On Code



W406B40

Enable 5-Digit Add-On Code



W406B00

\*\* Disable 5-Digit Add-On Code

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W106B10

UPC-A Add-On Code Required



W106B00

\*\* UPC-A Add-On Code Not Required



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Interleaved 2 of 5

**Restore Factory Defaults**



**WFFD99A**

Restore the Factory Defaults of Interleaved 2 of 5

## Enable/Disable Interleaved 2 of 5



**W016C01**

\*\* Enable Interleaved 2 of 5



**W016C00**

Disable Interleaved 2 of 5

---



**W010F00**

Exit Setup



W010F01

\*\* Enter Setup

## Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Interleaved 2 of 5 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C6C00

Disable



W0C6C04

\*\* Do Not Transmit Check Digit After Verification



W0C6C0C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Set Length Range for Interleaved 2 of 5

The scanner can be configured to only decode Interleaved 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Interleaved 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Interleaved 2 of 5 barcodes with that length are to be decoded.



M000307

Set the Minimum Length



M000306

Set the Maximum Length

**Example: Set the scanner to decode Interleaved 2 of 5 barcodes containing between 8 and 12 characters**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.

### Restore Factory Defaults



WFFD99B

Restore the Factory Defaults of ITF-6

### Enable/Disable ITF-6

By default, ITF-6 is decoded as Interleaved 2 of 5.



W036D01

Disable ITF-6



W0B6D02

Enable ITF-6 But Do Not Transmit Check Digit



W0B6D0A

Enable ITF-6 and Transmit Check Digit

**Note:** It is advised not to enable ITF-6 and Interleaved 2 of 5 at the same time.



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.

### Restore Factory Defaults



WFFD99C  
Restore the Factory Defaults of ITF-14

### Enable/Disable ITF-14

By default, ITF-14 is decoded as Interleaved 2 of 5.



W036E01  
Disable ITF-14



W0B6E02  
Enable ITF-14 But Do Not Transmit Check Digit



W0B6E0A  
Enable ITF-14 and Transmit Check Digit

**Note:** It is advised not to enable ITF-14 and Interleaved 2 of 5 at the same time.

---



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

---

## Deutsche 14

### Restore Factory Defaults



WFFD99D

Restore the Factory Defaults of Deutsche 14

### Enable/Disable Deutsche 14

By default, Deutsche 14 is decoded as Interleaved 2 of 5.



W036F01

Disable Deutsche 14



W0B6F02

Enable Deutsche 14 But Do Not Transmit Check Digit



W0B6F0A

Enable Deutsche 14 and Transmit Check Digit

**Note:** It is advised not to enable Deutsche 14 unless necessary, because Deutsche 14, ITF-14 and Interleaved 2 of 5 use the same encoding method and enabling them at the same time can easily cause confusion with each other when decoding.

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Deutsche 12

### Restore Factory Defaults



WFFD99E

Restore the Factory Defaults of Deutsche 12

### Enable/Disable Deutsche 12

By default, Deutsche 12 is decoded as Interleaved 2 of 5.



W037001

Disable Deutsche 12



W0B7002

Enable Deutsche 12 But Do Not Transmit Check Digit



W0B700A

Enable Deutsche 12 and Transmit Check Digit

**Note:** It is advised not to enable Deutsche 12 unless necessary, because Deutsche 12, ITF-12 and Interleaved 2 of 5 use the same encoding method and enabling them at the same time can easily cause confusion with each other when decoding.

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Matrix 2 of 5 (European Matrix 2 of 5)

**Restore Factory Defaults**



**WFFD99F**

Restore the Factory Defaults of Matrix 2 of 5

## Enable/Disable Matrix 2 of 5



**W017101**

\*\* Enable Matrix 2 of 5



**W017100**

Disable Matrix 2 of 5



**W010F00**

Exit Setup



W010F01

\*\* Enter Setup

---

## Check Digit Verification

A check digit is optional for Matrix 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Matrix 2 of 5 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C7100

\*\* Disable



W0C7104

Do Not Transmit Check Digit After Verification



W0C710C

Transmit Check Digit After Verification

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Set Length Range for Matrix 2 of 5

The scanner can be configured to only decode Matrix 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Matrix 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Matrix 2 of 5 barcodes with that length are to be decoded.



M000309

Set the Minimum Length



M000308

Set the Maximum Length

**Example: Set the scanner to decode Matrix 2 of 5 barcodes containing between 8 and 12 characters**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Industrial 25

### Restore Factory Defaults



WFFD9A0

Restore the Factory Defaults of Industrial 25

### Enable/Disable Industrial 25



W017201

\*\* Enable Industrial 25



W017200

Disable Industrial 25

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Check Digit Verification

A check digit is optional for Industrial 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Industrial 25 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C7200

\*\* Disable



W0C7204

Do Not Transmit Check Digit After Verification



W0C720C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Set Length Range for Industrial 25

The scanner can be configured to only decode Industrial 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Industrial 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Industrial 25 barcodes with that length are to be decoded.



M00030B

Set the Minimum Length



M00030A

Set the Maximum Length

**Example: Set the scanner to decode Industrial 25 barcodes containing between 8 and 12 characters**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Standard 25

### Restore Factory Defaults



WFFD9A1

Restore the Factory Defaults of Standard 25

### Enable/Disable Standard 25



W017301

\*\* Enable Standard 25



W017300

Disable Standard 25



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Check Digit Verification

A check digit is optional for Standard 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Standard 25 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C7300

\*\* Disable



W0C7304

Do Not Transmit Check Digit After Verification



W0C730C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Set Length Range for Standard 25

The scanner can be configured to only decode Standard 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Standard 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Standard 25 barcodes with that length are to be decoded.



M00030D

Set the Minimum Length



M00030C

Set the Maximum Length

**Example: Set the scanner to decode Standard 25 barcodes containing between 8 and 12 characters**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Code 39

### Restore Factory Defaults



WFFD9A2

Restore the Factory Defaults of Code 39

### Enable/Disable Code 39



W017401

\*\* Enable Code 39



W017400

Disable Code 39

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Check Digit Verification

A check digit is optional for Code 39 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Code 39 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W187400

\*\* Disable



W187408

Do Not Transmit Check Digit After Verification



W187418

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Transmit Start/Stop Characters

Code 39 uses an asterisk (\*) for both the start and the stop characters. You can choose whether or not to transmit the start/stop characters by scanning the appropriate barcode below.



W047404

Transmit Start/Stop Characters



W047400

\*\* Do Not Transmit Start/Stop Characters

### Enable/Disable Code 39 Full ASCII

The scanner can be configured to identify all ASCII characters by scanning the appropriate barcode below.



W207420

\*\* Enable Code 39 Full ASCII



W207400

Disable Code 39 Full ASCII

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Set Length Range for Code 39

The scanner can be configured to only decode Code 39 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Code 39 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 39 barcodes with that length are to be decoded.



M00030F

Set the Minimum Length



M00030E

Set the Maximum Length

**Example: Set the scanner to decode Code 39 barcodes containing between 8 and 12 characters.**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Codabar

**Restore Factory Defaults**



WFFD9A3

Restore the Factory Defaults of Codabar

**Enable/Disable Codabar**



W017501

\*\* Enable Codabar



W017500

Disable Codabar

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup


## Check Digit Verification

A check digit is optional for Codabar and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Codabar barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W607500

\*\* Disable



W607520

Do Not Transmit Check Digit After Verification



W607560

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

### Start/Stop Characters



W047504

\*\* Transmit Start/Stop Characters



W047500

Do Not Transmit Start/Stop Characters



W187500

\*\* ABCD/ABCD as the Start/Stop Character



W187508

ABCD/TN\*E as the Start/Stop Character



W187510

abcd/abcd as the Start/Stop Character



W187518

abcd/tn\*e as the Start/Stop Character

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Set Length Range for Codabar

The scanner can be configured to only decode Codabar barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Codabar barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Codabar barcodes with that length are to be decoded.



M000311

Set the Minimum Length



M000310

Set the Maximum Length

**Example: Set the scanner to decode Codabar barcodes containing between 8 and 12 characters.**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Code 93

### Restore Factory Defaults



WFFD9A4

Restore the Factory Defaults of Code 93

### Enable/Disable Code 93



W017601

\*\* Enable Code 93



W017600

Disable Code 93

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Check Digit Verification

Check digits are optional for Code 93 and can be added as the last two digits, which are calculated values used to verify the integrity of the data.

**Disable:** The scanner transmits Code 93 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



W0C7600

Disable



W0C7604

\*\* Do Not Transmit Check Digit After Verification



W0C760C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Set Length Range for Code 93

The scanner can be configured to only decode Code 93 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Code 93 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 93 barcodes with that length are to be decoded.



M000313

Set the Minimum Length



M000312

Set the Maximum Length

### Example: Set the scanner to decode Code 93 barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Code 11

### Restore Factory Defaults



WFFD9A5

Restore the Factory Defaults of Code 11

### Enable/Disable Code 11



W017701

Enable Code 11



W017700

\*\* Disable Code 11

---



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

## Check Digit Verification

Check digits are optional for Code 11 and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

If the **Disable** option is enabled, the scanner transmits Code 11 barcodes as is.



W1C7700

Disable



W1C7704

\*\* One Check Digit, MOD11



W1C7708

Two Check Digits, MOD11/MOD11



W1C770C

Two Check Digits, MOD11/MOD9



W1C7710

One Check Digit, MOD11 (Len <= 11)

Two Check Digits, MOD11/MOD11 (Len > 11)



W1C7714

One Check Digit, MOD11 (Len <= 11)

Two Check Digits, MOD11/MOD9 (Len > 11)



W207720

Transmit Check Digit



W207700

\*\* Do Not Transmit Check Digit



W010F00  
Exit Setup



W010F01

\*\* Enter Setup

## Set Length Range for Code 11

The scanner can be configured to only decode Code 11 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Code 11 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 11 barcodes with that length are to be decoded.



M000315

Set the Minimum Length



M000314

Set the Maximum Length

### Example: Set the scanner to decode Code 11 barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Plessey

### Restore Factory Defaults



WFFD9A6

Restore the Factory Defaults of Plessey

### Enable/Disable Plessey



W017801

Enable Plessey



W017800

\*\* Disable Plessey

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

## Check Digit Verification

Check digits are optional for Plessey and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

**Disable:** The scanner transmits Plessey barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



W0C7800

Disable



W0C7804

\*\* Do Not Transmit Check Digit After Verification



W0C780C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## Set Length Range for Plessey

The scanner can be configured to only decode Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Plessey barcodes with that length are to be decoded.



M000317

Set the Minimum Length



M000316

Set the Maximum Length

**Example: Set the scanner to decode Plessey barcodes containing between 8 and 12 characters.**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## MSI-Plessey

### Restore Factory Defaults



WFFD9A7

Restore the Factory Defaults of MSI-Plessey

### Enable/Disable MSI-Plessey



W017901

Enable MSI-Plessey



W017900

\*\* Disable MSI-Plessey



W010F00

Exit Setup



W010F01  
\*\* Enter Setup

---

## Check Digit Verification

Check digits are optional for MSI-Plessey and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

If the **Disable** option is enabled, the scanner transmits MSI-Plessey barcodes as is.



W0C7900

Disable



W0C7904

\*\* One Check Digit, MOD10



W0C7908

Two Check Digits, MOD10/MOD10



W0C790C

Two Check Digits, MOD10/MOD11



W107910

Transmit Check Digit



W107900

\*\* Do Not Transmit Check Digit



W010F00  
Exit Setup

---



W010F01

\*\* Enter Setup

## Set Length Range for MSI-Plessey

The scanner can be configured to only decode MSI-Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the scanner only decodes MSI-Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only MSI-Plessey barcodes with that length are to be decoded.



M000319

Set the Minimum Length



M000318

Set the Maximum Length

**Example: Set the scanner to decode MSI-Plessey barcodes containing between 8 and 12 characters.**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## RSS-14

### Restore Factory Defaults



WFFD9A8

Restore the Factory Defaults of RSS-14

### Enable/Disable RSS-14



W017A01

\*\* Enable RSS-14



W017A00

Disable RSS-14

### Transmit Application Identifier “01”



W047A04

\*\* Transmit Application Identifier “01”



W047A00

Do Not Transmit Application Identifier “01”

---



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## RSS-Limited

### Restore Factory Defaults



WFFD9A9

Restore the Factory Defaults of RSS-Limited

### Enable/Disable RSS-Limited



W017B01

\*\* Enable RSS-Limited



W017B00

Disable RSS-Limited

### Transmit Application Identifier “01”



W047B04

\*\* Transmit Application Identifier “01”



W047B00

Do Not Transmit Application Identifier “01”



W010F00

Exit Setup



W010F01

\*\* Enter Setup

---

## RSS-Expand

### Restore Factory Defaults



WFFD9AA

Restore the Factory Defaults of RSS-Expand

### Enable/Disable RSS-Expand



W017C01

\*\* Enable RSS-Expand



W017C00

Disable RSS-Expand

---



W010F00

Exit Setup

## Appendix

### Factory Defaults Table

Parameter		Factory Default	Remark
<b>System Settings</b>			
Barcode Programming		Enabled	
Programming Barcode Data		Do not send	
Scan Mode		Manual Mode	
Manual Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
Continuous Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
	Timeout between Decodes	1.0s	0.0-25.5s
	Reread Same Barcode	With no delay	To disable rereads of same barcode, enable the <b>Reread Same Barcode with a Delay</b> and set the delay to 0.
Sense Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
	Image Stabilization Timeout	0.4s	0.0-25.5s
	Reread Same Barcode	With no delay	To disable rereads of same barcode, enable the <b>Reread Same Barcode with a Delay</b> and set the delay to 0.
	Sensitivity	Medium	
Command Trigger Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
Security Level	0		
Good Read Beep	Enabled		
Good Read Beep Frequency	Medium		
Good Read Beep Duration	80ms		
Decode Result Notification	Disabled		
Silent Mode	Disabled	Temporary setting	
Illumination	On When Scanning	Temporary setting	

Parameter	Factory Default	Remark
<b>Communication Interfaces</b>		
RS-232 Interface	Baud Rate	9600
	Parity Check	None
	Number of Data Bits	8
	Number of Stop Bits	1
	Flow Control	None
USB Interface	USB HID-KBW	Other options: DataPipe, USB COM Port Emulation, HID-POS
USB HID-KBW	Input Mode	Standard Keyboard
	USB Country Keyboard Type	U.S.
	Inter-Keystroke Delay	No delay
	Convert Case	No Conversion
	Emulate Numeric Keypad	Disabled
<b>Prefix &amp; Suffix</b>		
Prefix Sequence	Code ID+Custom+AIM ID	
AIM ID Prefix	Disabled	
Code ID Prefix	Disabled	1 or 2 English letters
Custom Prefix	Disabled	1 to 5 characters
Custom Suffix	Disabled	1 to 5 characters
Terminating Character Suffix	Enabled, 0x0D,0x0A	0x0D,0x0A: CRLF

Parameter	Factory Default	Remark
<b>Symbologies</b>		
Video Reverse	Disabled	Applicable to all symbologies.
<b>Code 128</b>		
Code 128	Enabled	
Minimum Length	1	No less than 1 (including check digit)
Maximum Length	80	
<b>UCC/EAN-128 (GS1-128)</b>		
UCC/EAN-128	Enabled	
Minimum Length	1	No less than 1 (including check digit)
Maximum Length	80	
<b>AIM 128</b>		
AIM 128	Disabled	
Minimum Length	1	No less than 1 (including check digit)
Maximum Length	80	
<b>EAN-8</b>		
EAN-8	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to EAN-13	Disabled	
<b>EAN-13</b>		
EAN-13	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
<b>ISSN</b>		
ISSN	Disabled	
<b>ISBN</b>		
ISBN	Disabled	
ISBN Format	ISBN-13	

Parameter	Factory Default	Remark
<b>UPC-E</b>		
UPC-E	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to UPC-A	Disabled	
System Character	Transmit	
<b>UPC-A</b>		
UPC-A	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Transmit Preamble Character	System character	
<b>Interleaved 2 of 5</b>		
Interleaved 2 of 5	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 3 (including check digit)
Maximum Length	100	
<b>ITF-6</b>		
ITF-6	Decode as I25	
Check Digit	Transmit	
<b>ITF-14</b>		
ITF-14	Decode as I25	
Check Digit	Transmit	
<b>Deutsche 14</b>		
Deutsche 14	Decode as I25	
Check Digit	Transmit	
<b>Deutsche 12</b>		
Deutsche 12	Decode as I25	
Check Digit	Transmit	

Parameter	Factory Default	Remark
<b>Matrix 2 of 5</b>		
Matrix 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 2 (including check digit)
Maximum Length	80	
<b>Industrial 25</b>		
Industrial 25	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 2 (including check digit)
Maximum Length	80	
<b>Standard 25</b>		
Standard 25	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 2 (including check digit)
Maximum Length	80	
<b>Code 39</b>		
Code 39	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Characters	Do not transmit	
Code 39 Full ASCII	Enabled	
Minimum Length	4	No less than 2 (including check digit)
Maximum Length	50	

Parameter	Factory Default	Remark
<b>Codabar</b>		
Codabar	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Characters	Transmit	
Start/Stop Character Format	ABCD/ABCD	
Minimum Length	4	No less than 1 (including check digit)
Maximum Length	60	
<b>Code 93</b>		
Code 93	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Minimum Length	2	No less than 1 (including check digit)
Maximum Length	80	
<b>Code 11</b>		
Code 11	Disabled	
Check Digit Verification	One check digit, MOD11	
Check Digit	Do not transmit	
Minimum Length	4	No less than 2 (including check digit)
Maximum Length	80	
<b>Plessey</b>		
Plessey	Disabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Minimum Length	4	No less than 3 (including check digit)
Maximum Length	60	

---

Parameter	Factory Default	Remark
<b><i>MSI-Plessey</i></b>		
MSI-Plessey	Disabled	
Check Digit Verification	One check digit, MOD10	
Check Digit	Do not transmit	
Minimum Length	4	No less than 2 (including check digit)
Maximum Length	60	
<b><i>RSS-14</i></b>		
RSS-14	Enabled	
AI (Application Identifier)	Transmit	
<b><i>RSS-Limited</i></b>		
RSS-Limited	Enabled	
AI (Application Identifier)	Transmit	
<b><i>RSS-Expand</i></b>		
RSS-Expand	Enabled	

## AIM ID Table

Symbol	AIM ID	Remark
Code 128	]C0	Standard Code 128
UCC/EAN 128 (GS1-128)	]C1	FNC1 is the character right after the start character
AIM 128	]C2	FNC1 is the 2nd character after the start character
EAN-8	]E4	Standard EAN-8
	]E4....]E1...	EAN-8 + 2-Digit Add-On Code
	]E4....]E2...	EAN-8 + 5-Digit Add-On Code
EAN-13	]E0	Standard EAN-13
	]E3	EAN-13 + 2/5-Digit Add-On Code
ISSN	]X5	
ISBN	]X4	
UPC-E	]E0	Standard UPC-E
	]E3	UPC-E + 2/5-Digit Add-On Code
UPC-A	]E0	Standard UPC-A
	]E3	UPC-A + 2/5-Digit Add-On Code
Interleaved 2 of 5	]I0	No check digit verification
	]I1	Transmit check digit after verification
	]I3	Do not transmit check digit after verification
ITF-6	]I1	Transmit check digit
	]I3	Do not transmit check digit
ITF-14	]I1	Transmit check digit
	]I3	Do not transmit check digit
Deutsche 14 Deutsche 12	]X0	
Matrix 2 of 5	]X1	No check digit verification
	]X2	Transmit check digit after verification
	]X3	Do not transmit check digit after verification
Industrial 25	]S0	Not specified
Standard 25	]R0	No check digit verification
	]R8	One check digit, MOD 7; do not transmit check digit
	]R9	One check digit, MOD 7; transmit check digit

Symbology	AIM ID	Remark
Code 39	]A0	Transmit barcodes as is; Full ASCII disabled; no check digit verification
	]A1	One check digit, MOD 43; transmit check digit
	]A3	One check digit, MOD 43; do not transmit check digit
	]A4	Full ASCII enabled; no check digit verification
	]A5	Full ASCII enabled; MOD43; transmit check digit
	]A7	Full ASCII enabled; MOD43; do not transmit check digit
Codabar	]F0	Standard Codabar
	]F1	ABC Codabar
	]F2	Transmit check digit after verification
	]F4	Do not transmit check digit after verification
Code 93	]G0	Not specified
Code 11	]H0	One check digit, MOD11; transmit check digit
	]H1	Two check digits, MOD11/MOD11; transmit check digit
	]H3	Do not transmit check digit after verification
	]H8	Two check digits, MOD11/MOD9; transmit check digit
	]H9	No check digit verification
Plessey	]P0	Not specified
MSI Plessey	]M0	One check digit, MOD10; transmit check digit
	]M1	One check digit, MOD10; do not transmit check digit
	]M7	Two check digits, MOD10 /MOD11; do not transmit check digit
	]M8	Two check digits, MOD10 /MOD11; transmit check digit
	]M9	No check digit verification
RSS-14/RSS-Limited RSS-Expand	]e0	Standard
	]e1	User-defined
	]e2	User-defined
	]e3	User-defined

Reference: ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers)

---

## Code ID Table

Symbology	Code ID
Code 128	j
UCC/EAN-128	u
AIM 128	f
SETTING 128	t
EAN-8	g
EAN-13	d
ISSN	n
ISBN	B
UPC-E	h
UPC-A	c
Interleaved 2 of 5	e
ITF-6	r
ITF-14	q
Deutsche 14	w
Deutsche 12	l
Matrix 2 of 5(European Matrix 2 of 5)	v
Industrial 25	i
Standard 25	s
Code 39	b
Codabar	a
Code 93	y
Code 11	z
Plessey	p
MSI-Plessey	m
RSS-14	D
RSS-Limited	C
RSS-Expand	R

---

## ASCII Table

Hex	Dec	Char
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgment)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)

---

---

Hex	Dec	Char
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	( (Left / Opening Parenthesis)
29	41	) (Right / Closing Parenthesis)
2a	42	*
2b	43	+
2c	44	,
2d	45	- (Minus / Dash)
2e	46	.
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	:
3b	59	;
3c	60	< (Less Than)
3d	61	= (Equal Sign)

---

Hex	Dec	Char
3e	62	> (Greater Than)
3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[ (Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93	] (Right / Closing Bracket)

---

Hex	Dec	Char
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)
61	97	a
62	98	b
63	99	c
64	100	d
65	101	e
66	102	f
67	103	g
68	104	h
69	105	i
6a	106	j
6b	107	k
6c	108	l
6d	109	m
6e	110	n
6f	111	o
70	112	p
71	113	q
72	114	r
73	115	s
74	116	t
75	117	u
76	118	v
77	119	w
78	120	x
79	121	y
7a	122	z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)

---

---

## Digit Barcodes

0 ~ 5




D000000

0



D000001

1

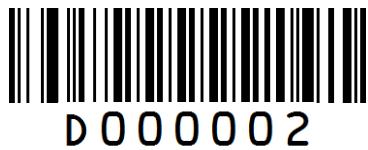

D000002

2



D000003

3



D000004

4



D000005

5

---


6~9




6



7

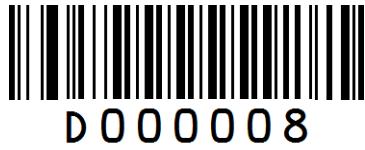

8

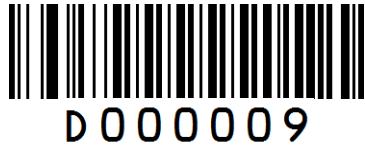

9

---

---

A ~ F



D00000A

A



D00000B

B



D00000C

C



D00000D

D



D00000E

E



D00000F

F

---

## Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel the Last Digit** barcode and then the correct digit, or scan the **Cancel All Digits** barcode and then the digits you want.

For instance, after reading the **Decode Session Timeout** barcode and numeric barcodes “1”, “2” and “3”, you scan:

**Cancel the Last Digit:** The last digit “3” will be removed.

**Cancel All Digits:** All digits “123” will be removed.



D 0 0 0 0 1 2

Save



D 0 0 0 0 1 0

Cancel the Last Digit



D 0 0 0 0 1 1

Cancel All Digits

---

## F1~F12

When the USB HID-KBW feature is enabled, scanning one of the following barcodes will send the corresponding function key.

F1~F6



F000000

F1



F000001

F2



F000002

F3



F000003

F4



F000004

F5



F000005

F6

---

F7~F12



F000006

F7



F000007

F8



F000008

F9



F000009

F10



F00000A

F11



F00000B

F12

---



#### Headquarters

Fujian Newland Auto-ID Tech. Co., Ltd.  
3F, Building A, No.1, Ruijiang West Rd., Mawei, Fuzhou,  
Fujian, China 350015  
TEL: +86 - (0) 591-83978605  
FAX: +86 - (0) 591-83979216  
E-mail: [marketing@nlscan.com](mailto:marketing@nlscan.com)  
WEB : [www.nlscan.com](http://www.nlscan.com)

#### Newland Europe BV

Rolweg 25, 4104 AV Culemborg, The Netherlands  
TEL: +31 (0) 345 87 00 33  
FAX: +31 (0) 345 87 00 39  
Email: [info@newland-id.com](mailto:info@newland-id.com)  
WEB: [www.newland-id.com](http://www.newland-id.com)  
Tech Support: tech-support@newland-id.com

#### Newland North America Inc.

Address: 46559 Fremont Blvd., Fremont, CA 94538, USA  
TEL: 510 490 3888  
Fax: 510 490 3887  
Email: [info@newlandna.com](mailto:info@newlandna.com)  
WEB: [www.newlandna.com](http://www.newlandna.com)

#### Newland Taiwan Inc.

7F-6, No. 268, Liancheng Rd., Jhonghe Dist. 235, New  
Taipei City, Taiwan  
TEL: +886 2 7731 5388  
FAX: +886 2 7731 5389  
Email: [info@newland-id.com.tw](mailto:info@newland-id.com.tw)  
WEB: [www.newland-id.com.tw](http://www.newland-id.com.tw)